

YAMAHA Sparepart list

OEM	PLATFORM	Part Number	Description
YAMAHA	YSM20	\$NK-3N	NYLON CLIP
YAMAHA	YSM20	90990-11J003	SCREW, PAN HEAD W/W
YAMAHA	YSM20	90K41-001450	LABEL,CAUTION
YAMAHA	YSM20	91312-04006	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-04008	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-05008	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-05010	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-06012	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KKE-M111M-00	PLATE,CLAMP
YAMAHA	YSM20	KLW-M111L-00	BRKT.,POWER SUPPLY 1
YAMAHA	YSM20	KLW-M1125-00	PLATE,25
YAMAHA	YSM20	KLW-M1126-00	PLATE,26
YAMAHA	YSM20	KLW-M1128-00	PLATE,CONV.
YAMAHA	YSM20	KLW-M112A-00	BASE,BOARD
YAMAHA	YSM20	KLW-M112B-00	COVER,BOARD
YAMAHA	YSM20	KLW-M112C-00	PLATE,BAT.
YAMAHA	YSM20	KLW-M112D-00	HOLDER,BOARD
YAMAHA	YSM20	KLW-M112E-00	PLATE,BASE
YAMAHA	YSM20	KLW-M1133-00	STAY, TRANSFORMER
YAMAHA	YSM20	KLW-M1134-00	BRKT.,TRANS. 1
YAMAHA	YSM20	KLW-M1136-00	PLATE,SIDE INNER 1
YAMAHA	YSM20	KLW-M1137-00	PLATE,SIDE INNER 2
YAMAHA	YSM20	KLW-M1138-00	BRKT.,FAN INSIDE
YAMAHA	YSM20	KLW-M1139-00	BRKT.,SIDE PLATE
YAMAHA	YSM20	KLW-M113D-00	PLATE,BASE 5
YAMAHA	YSM20	KLW-M113F-00	BRKT.,CONNECTOR
YAMAHA	YSM20	KLW-M113M-00	PLATE,FAN
YAMAHA	YSM20	KLW-M113N-00	BRKT,DUCT
YAMAHA	YSM20	KLW-M1336-00	BRKT.,REAR LEFT
YAMAHA	YSM20	KLW-M1337-00	BRKT.,REAR RIGHT
YAMAHA	YSM20	KLW-M1338-00	BRKT.,MAIN SWITCH
YAMAHA	YSM20	KLW-M1339-00	BRKT.,FL
YAMAHA	YSM20	KLW-M1339-10	BRKT.,FL
YAMAHA	YSM20	KLW-M133A-00	BRKT.,GATE IN OUT
YAMAHA	YSM20	97602-05310	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	98702-03006	SCREW,FLAT HEAD
YAMAHA	YSM20	\$FVU8-8	JOINT
YAMAHA	YSM20	\$KM-11	MUFFLER
YAMAHA	YSM20	\$KM-31	MUFFLER
YAMAHA	YSM20	\$SL12-03	JOINT
YAMAHA	YSM20	\$SL8-01	JOINT
YAMAHA	YSM20	\$SLY10-03	JOINT
YAMAHA	YSM20	\$TL4-02	JOINT
YAMAHA	YSM20	\$UC4	JOINT
YAMAHA	YSM20	\$UC6	JOINT
YAMAHA	YSM20	\$UEDW10-8	JOINT
YAMAHA	YSM20	\$UP10	JOINT
YAMAHA	YSM20	\$UP8	JOINT

YAMAHA Sparepart list

YAMAHA	YSM20	\$UY10	JOINT
YAMAHA	YSM20	\$UY12	JOINT
YAMAHA	YSM20	\$UY4	JOINT
YAMAHA	YSM20	\$UY6	JOINT
YAMAHA	YSM20	\$UY8	JOINT
YAMAHA	YSM20	\$UYD10-8	JOINT
YAMAHA	YSM20	\$UYD8-6	JOINT
YAMAHA	YSM20	91312-03020	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-04014	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-04025	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-05012	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-06010	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHY-M8504-01	REGULATOR
YAMAHA	YSM20	KMC-M8504-00	REGULATOR
YAMAHA	YSM20	\$UB1065-BK	URETHANE TUBE
YAMAHA	YSM20	KLW-M1111-00	PLATE,REG.
YAMAHA	YSM20	KMC-M1111-00	PLATE,REG.
YAMAHA	YSM20	KLW-M1124-00	PLATE,FILTER
YAMAHA	YSM20	KLW-M1127-00	PLATE,EXT.VALVE
YAMAHA	YSM20	KLW-M113P-00	CAP
YAMAHA	YSM20	KLW-M1180-00	LEVELING BOLT ASSY.
YAMAHA	YSM20	KLW-M8501-00	VALVE,EXHAUST
YAMAHA	YSM20	KLW-M8502-00	FILTER ASSY.
YAMAHA	YSM20	KLW-M8502-01	FILTER ASSY.
YAMAHA	YSM20	KLW-M8582-A0	VALVE ASSY.
YAMAHA	YSM20	92902-06200	WASHER,PLAIN
YAMAHA	YSM20	KLF-M8502-50	FILTER ELEMENT
YAMAHA	YSM20	KLF-M8502-70	MIST FILTER ELEMENT
YAMAHA	YSM20	KLW-M8502-61	CASE,AIR FILTER
YAMAHA	YSM20	KLW-M8502-81	CASE,MIST FILTER
YAMAHA	YSM20	90990-01J011	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90990-01J038	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90990-12J001	SCREW, BIN. HEAD W/W
YAMAHA	YSM20	90990-12J006	SCREW, BIN. HEAD W/W
YAMAHA	YSM20	90990-41J048	COLLAR
YAMAHA	YSM20	90K41-001290	LABEL,WARNING
YAMAHA	YSM20	91312-03006	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-03010	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	92012-03010	BOLT,BUTTON HEAD
YAMAHA	YSM20	91312-04010	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-04012	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-08035	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KH1-M13A9-00	BUSH
YAMAHA	YSM20	KHY-M5126-00	SAFETY SWITCH
YAMAHA	YSM20	KLF-M1318-00	COVER 18
YAMAHA	YSM20	KLF-M13B3-00	SCREW,PLASTIC HEAD
YAMAHA	YSM20	KLF-M6680-30	HNS,ADAPTER USB
YAMAHA	YSM20	KLH-M5126-00	SAFETY DOOR LOCK SW
YAMAHA	YSM20	KLW-M1301-01	COVER 1

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M130B-00	COVER,SW.
YAMAHA	YSM20	KLW-M130C-01	BRKT.,KEYBOARD
YAMAHA	YSM20	KLW-M130D-01	DOOR,COVER 1
YAMAHA	YSM20	KLW-M130G-01	BRKT.,USB
YAMAHA	YSM20	KLW-M131C-00	BRKT.1,CONNECTOR
YAMAHA	YSM20	KLW-M131E-00	PLATE,CONNECTOR
YAMAHA	YSM20	KLW-M1341-00	RAIL R,COVER9
YAMAHA	YSM20	KLW-M135A-00	PLATE,STOPPER
YAMAHA	YSM20	KLW-M135D-00	STAY,MAGNET
YAMAHA	YSM20	KLW-M135F-00	STOPPER
YAMAHA	YSM20	KLW-M135G-01	BRKT.,STOPPER
YAMAHA	YSM20	KLW-M135G-02	BRKT.,STOPPER
YAMAHA	YSM20	KLW-M135H-00	BRKT.2,STOPPER
YAMAHA	YSM20	-	
YAMAHA	YSM20	KLW-M137C-00	COVER,PANEL C
YAMAHA	YSM20	KLW-M137C-01	COVER,PANEL C
YAMAHA	YSM20	KLW-M137C-02	COVER,PANEL C
YAMAHA	YSM20	KLW-M137E-00	COVER,PANEL E
YAMAHA	YSM20	KLW-M1381-00	MOUNT,MONITOR
YAMAHA	YSM20	KLW-M1382-00	BRKT.,MOUNT
YAMAHA	YSM20	KLW-M1383-00	STAY,LCD UNIT
YAMAHA	YSM20	KLW-M1384-00	BRACKET,LCD
YAMAHA	YSM20	KLW-M1385-00	STAY,PAT LIGHT
YAMAHA	YSM20	KLW-M1386-00	BRKT.,PAT LIGHT
YAMAHA	YSM20	KLW-M13D6-00	SEAL 1(YSM20)
YAMAHA	YSM20	KLW-M13NA-00	FILTER,FAN 2
YAMAHA	YSM20	KLW-M13NC-01	COVER 1-2
YAMAHA	YSM20	KLW-M13ND-00	COVER,FAN 2
YAMAHA	YSM20	KLW-M26F9-01	BRKT.1,COVER 1
YAMAHA	YSM20	KLW-M3T0H-00	COUPLER,SOCKET
YAMAHA	YSM20	KLW-M6185-90	FAN MOTOR ASSY
YAMAHA	YSM20	KV5-M1130-00	CATCH MG.
YAMAHA	YSM20	KX0-M418J-00	CUSHION
YAMAHA	YSM20	92902-03200	WASHER,PLAIN
YAMAHA	YSM20	92902-04200	WASHER,PLAIN
YAMAHA	YSM20	92902-08200	WASHER,PLAIN
YAMAHA	YSM20	95602-08100	NUT, U
YAMAHA	YSM20	97602-03106	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	98902-03006	SCREW BINDING HEAD
YAMAHA	YSM20	90172-00J040	WASHER, EXTL, TOOTHED
YAMAHA	YSM20	90990-23J006	GROMMET
YAMAHA	YSM20	KGB-M5184-00	SEAL,CLAMP ON/OFF
YAMAHA	YSM20	KGJ-M1350-00	SPACER,MINI LATCH
YAMAHA	YSM20	KGJ-M1351-01	PLATE,MINI LATCH
YAMAHA	YSM20	KKE-M26CE-01	FAN MOTOR
YAMAHA	YSM20	KLW-M3992-00	SWITCH,SELECT
YAMAHA	YSM20	KLW-M1302-00	COVER 2
YAMAHA	YSM20	KLW-M130E-00	DOOR,COVER 2
YAMAHA	YSM20	KLW-M130F-00	BRKT.,CONNECTOR

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M131D-00	BRKT.2,CONNECTOR
YAMAHA	YSM20	KLW-M133B-00	SEAL,BLIND
YAMAHA	YSM20	KLW-M1342-00	RAIL L,COVER9
YAMAHA	YSM20	KLW-M135C-00	BRACKET,4
YAMAHA	YSM20	KLW-M135E-00	PLATE,RAIL
YAMAHA	YSM20	KLW-M135G-020	BRKT.,STOPPER
YAMAHA	YSM20	KLW-M1372-00	COVER 72
YAMAHA	YSM20	KLW-M137B-00	COVER,PANEL B
YAMAHA	YSM20	KLW-M137B-01	COVER,PANEL B
YAMAHA	YSM20	KLW-M137B-020	COVER,PANEL B
YAMAHA	YSM20	KLW-M137D-00	COVER,PANEL D
YAMAHA	YSM20	KLW-M13A7-00	COVER A7
YAMAHA	YSM20	KLW-M13N7-00	BRKT.1,COVER 72
YAMAHA	YSM20	KW3-M1349-00	MINI LATCH
YAMAHA	YSM20	90K41-001250	LABEL,WARNING
YAMAHA	YSM20	KLW-M137B-02	COVER,PANEL B
YAMAHA	YSM20	90172-00J030	WASHER, EXTL, TOOTHED
YAMAHA	YSM20	91312-05006	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M1304-01	COVER
YAMAHA	YSM20	KLW-M1306-00	COVER 6-1
YAMAHA	YSM20	KLW-M1307-00	COVER 6-2
YAMAHA	YSM20	KLW-M1308-00	COVER 6-3
YAMAHA	YSM20	KLW-M130H-00	PLATE,LIGHT
YAMAHA	YSM20	KLW-M1329-00	COVER 29
YAMAHA	YSM20	KLW-M135B-00	BRACKET,3
YAMAHA	YSM20	KLW-M135K-00	STAY,DAMPER
YAMAHA	YSM20	92902-05200	WASHER,PLAIN
YAMAHA	YSM20	90990-41J179	COLLAR
YAMAHA	YSM20	90990-46J001	BOLT, THIN HEAD
YAMAHA	YSM20	90990-46J015	BOLT, THIN HEAD
YAMAHA	YSM20	90K41-001420	LABEL,WARNING
YAMAHA	YSM20	91312-03005	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	92012-05008	BOLT BUTTON HEAD
YAMAHA	YSM20	95702-04500	NUT FLANGE
YAMAHA	YSM20	KKG-M13D8-00	STICKER
YAMAHA	YSM20	KKX-M13D7-00	SEAL 2(YAMAHA)
YAMAHA	YSM20	KLF-M1392-00	LABEL,WARNING
YAMAHA	YSM20	KLV-M1347-00	PULL
YAMAHA	YSM20	KLW-M1345-00	FRAME3,COVER9
YAMAHA	YSM20	KLW-M1346-00	FRAME4,COVER9
YAMAHA	YSM20	KLW-M1347-00	FRAME5,COVER9
YAMAHA	YSM20	KLW-M1348-00	ROLLER
YAMAHA	YSM20	KLW-M134A-00	BLOCK,FRAME
YAMAHA	YSM20	KLW-M134B-00	PLATE,FRAME
YAMAHA	YSM20	KLW-M134F-00	BRKT.1,ROLLER
YAMAHA	YSM20	KLW-M134G-00	BRKT.2,ROLLER
YAMAHA	YSM20	KLW-M134J-00	BRKT.1,FRAME
YAMAHA	YSM20	KLW-M134K-00	NUT,FRAME M4
YAMAHA	YSM20	KLW-M134L-00	NUT,FRAME M5

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M134M-00	PLATE,WINDOW
YAMAHA	YSM20	KLW-M134P-00	COVER 9-2
YAMAHA	YSM20	KLW-M134R-00	COVER 9-3
YAMAHA	YSM20	KLW-M134R-01	COVER 9-3
YAMAHA	YSM20	KLW-M134S-00	COVER 9-4
YAMAHA	YSM20	KLW-M134T-00	COVER 9-5(SS)
YAMAHA	YSM20	KLW-M134T-10	COVER 9-5(ZS)
YAMAHA	YSM20	KLW-M134U-00	COVER 9-6
YAMAHA	YSM20	KLW-M134V-00	COVER 9-7
YAMAHA	YSM20	KLW-M134V-01	COVER 9-7
YAMAHA	YSM20	KLW-M1359-00	BRKT.3,DAMPER
YAMAHA	YSM20	KLW-M135M-00	PLATE,1
YAMAHA	YSM20	KLW-M135P-00	HINGE,SPRING
YAMAHA	YSM20	KLW-M135R-00	PLATE,NUT
YAMAHA	YSM20	KLW-M135S-00	TAPE
YAMAHA	YSM20	KLW-M13D8-00	LABEL (Z:LEX)
YAMAHA	YSM20	97602-04306	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	98702-03008	SCREW,FLAT HEAD
YAMAHA	YSM20	90990-06J002	BOLT,BUTTON HEAD
YAMAHA	YSM20	90990-12J003	SCREW, BIN. HEAD W/W
YAMAHA	YSM20	90990-31J006	BOLT, SHOULDER
YAMAHA	YSM20	K46-M1374-12	HINGE 2
YAMAHA	YSM20	KGS-M1348-00	GAS,SPRING
YAMAHA	YSM20	KKG-M13D8-10	STICKER
YAMAHA	YSM20	KLF-M3749-00	WASHER
YAMAHA	YSM20	KLF-M374G-00	BOLT,SHOULDER
YAMAHA	YSM20	KLF-M374J-00	GAS DAMPER
YAMAHA	YSM20	KLW-M1343-00	FRAME1,COVER9
YAMAHA	YSM20	KLW-M1344-00	FRAME2,COVER9
YAMAHA	YSM20	KLW-M134H-00	HINGE
YAMAHA	YSM20	KLW-M134N-00	COVER 9-1
YAMAHA	YSM20	KLW-M1352-00	PLATE,HINGE
YAMAHA	YSM20	KLW-M1353-00	BRKT.,KEY R
YAMAHA	YSM20	KLW-M1354-00	BRKT.,KEY L
YAMAHA	YSM20	KLW-M1355-00	BRKT.2,FRAME
YAMAHA	YSM20	KLW-M1357-00	BRKT.1,DAMPER
YAMAHA	YSM20	KLW-M1358-00	BRKT.2,DAMPER
YAMAHA	YSM20	KLW-M1309-A0	COVER9 ASSY.
YAMAHA	YSM20	91317-05010	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90K41-001270	LABEL,WARNING
YAMAHA	YSM20	KGA-M11A0-A0	PLATE,SERIAL
YAMAHA	YSM20	KGA-M11A0-B0	BLIND RIVET
YAMAHA	YSM20	KGA-M4187-00	FAN GUARD 119MM
YAMAHA	YSM20	KGS-M6417-00	SEAL,PERIOD
YAMAHA	YSM20	KGS-M6427-00	SEAL.PRODUCTION
YAMAHA	YSM20	KHU-M1117-00	PULL
YAMAHA	YSM20	KHY-M6417-00	SEAL,CE
YAMAHA	YSM20	KKE-M6175-10	FAN MOTOR
YAMAHA	YSM20	KLS-M13B5-00	MAGNET CATCH

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M1310-01	COVER 10
YAMAHA	YSM20	KLW-M1311-00	COVER 11
YAMAHA	YSM20	KLW-M1312-00	COVER 12
YAMAHA	YSM20	KLW-M1313-01	COVER 13
YAMAHA	YSM20	KLW-M1314-00	COVER 14
YAMAHA	YSM20	KLW-M131A-00	BRKT.,COVER 12
YAMAHA	YSM20	KLW-M131B-00	BRKT.,COVER 14
YAMAHA	YSM20	KLW-M132A-00	COVER 10-1
YAMAHA	YSM20	KLW-M132B-00	COVER 13-1
YAMAHA	YSM20	KLW-M132C-00	COVER 15-1
YAMAHA	YSM20	KLW-M132D-00	COVER 11-1
YAMAHA	YSM20	KLW-M1373-01	COVER 73
YAMAHA	YSM20	KLW-M1373-02	COVER 73
YAMAHA	YSM20	KLW-M137A-00	COVER,PANEL A
YAMAHA	YSM20	KLW-M13N2-01	BRKT.,REAR FAN 1
YAMAHA	YSM20	KLW-M13N3-00	BRKT.,REAR FAN 2
YAMAHA	YSM20	KLW-M13N8-00	BRKT.1,COVER 51
YAMAHA	YSM20	KLW-M13N9-00	BRKT.2,COVER 51
YAMAHA	YSM20	KLW-M13NB-00	FILTER,REAR FAN
YAMAHA	YSM20	KLW-M13NE-00	BRKT.1,COVER 11
YAMAHA	YSM20	KLW-M13NF-00	BRKT.2,COVER 11
YAMAHA	YSM20	KLW-M13NG-00	BRKT.1,COVER 10
YAMAHA	YSM20	KLW-M13NH-00	BRKT.2,COVER 10
YAMAHA	YSM20	KLW-M13NJ-00	COVER 15-2
YAMAHA	YSM20	KLW-M13NM-00	BRKT.,FILTER 1
YAMAHA	YSM20	KLW-M13NN-00	BRKT.,FILTER 2
YAMAHA	YSM20	KLW-M4187-00	GUIDE,FAN
YAMAHA	YSM20	KLW-M6175-00	FAN 150
YAMAHA	YSM20	98902-03008	SCREW BINDING HEAD
YAMAHA	YSM20	K44-M1354-00	MG. CATCH
YAMAHA	YSM20	KLW-M137F-00	PLATE,CENTER
YAMAHA	YSM20	KLW-M137G-00	BAR,CENTER
YAMAHA	YSM20	KLW-M137H-00	BRACKET,CENTER
YAMAHA	YSM20	KLW-M1361-00	COVER,HARNESS
YAMAHA	YSM20	KLW-M1362-00	BRKT.1,UPS
YAMAHA	YSM20	KLW-M1363-00	BRKT.2,UPS
YAMAHA	YSM20	KLW-M1364-00	BRKT.3,UPS
YAMAHA	YSM20	KLW-M1365-00	BRKT.4,UPS
YAMAHA	YSM20	KLW-M1375-01	COVER 73-2
YAMAHA	YSM20	KLW-M13N5-00	BRKT.1,COVER 73-2
YAMAHA	YSM20	KLW-M13NP-00	BRKT.2,COVER 73-2
YAMAHA	YSM20	KV7-M1515-00	PLATE, RUBBER
YAMAHA	YSM20	90990-12J004	SCREW, BIN. HEAD W/W
YAMAHA	YSM20	90172-00J050	WASHER, EXTL, TOOTHED
YAMAHA	YSM20	KLW-M13F1-00	COVER,CE F1
YAMAHA	YSM20	KLW-M13F2-00	COVER,CE F2
YAMAHA	YSM20	KLW-M13F4-00	COVER,CE F4
YAMAHA	YSM20	KLW-M13F4-01	COVER,CE F4
YAMAHA	YSM20	KLW-M13F5-00	COVER,CE F5

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M13F5-01	COVER,CE F5
YAMAHA	YSM20	KLW-M26F8-01	BRKT.2,COVER 2
YAMAHA	YSM20	KHY-M349J-40	LABEL,INDICATOR
YAMAHA	YSM20	KHY-M371R-00	RAIL GUIDE 12P
YAMAHA	YSM20	KHY-M379L-00	LABEL,LED
YAMAHA	YSM20	KHY-M37E1-00	LIGHT GUIDE
YAMAHA	YSM20	KKG-M371A-01	PLATE,FRONT
YAMAHA	YSM20	KKG-M371B-00	SHAFT GUIDE
YAMAHA	YSM20	KKG-M371R-00	RAIL GUIDE 12P
YAMAHA	YSM20	KKG-M373L-00	LABEL,FEEDER 32-12P
YAMAHA	YSM20	KLW-M3701-02	BASE,FES
YAMAHA	YSM20	KLW-M3702-00	BUSH
YAMAHA	YSM20	KLW-M3703-00	PLATE,IND 1
YAMAHA	YSM20	KLW-M3704-01	BRKT.,BOARD
YAMAHA	YSM20	KLW-M370F-02	BLOCK,CONNECTOR
YAMAHA	YSM20	KLW-M370G-00	COVER,CONNECTOR
YAMAHA	YSM20	KLW-M370L-00	PLATE,CONNECTOR L
YAMAHA	YSM20	KLW-M370M-00	PLATE,CONNECTOR R
YAMAHA	YSM20	KLW-M3712-02	COVER,TAPE GUIDE
YAMAHA	YSM20	KLW-M3714-01	PIN,MARK
YAMAHA	YSM20	KLW-M3723-01	PLATE,ARM R
YAMAHA	YSM20	KLW-M3724-01	PLATE,ARM L
YAMAHA	YSM20	KLW-M3741-00	LABEL,LED POSI.
YAMAHA	YSM20	KLW-M37AA-00	FES32 BASE ASSY.
YAMAHA	YSM20	KLW-M37AB-00	INDICATOR ASSY.
YAMAHA	YSM20	KLW-M4476-02	FDR.CTRL.BOARD ASSY
YAMAHA	YSM20	KLW-M66R4-00	HNS,FES.CUNET
YAMAHA	YSM20	KLW-M66R5-00	HNS,FES PWR
YAMAHA	YSM20	90112-2AJ006	BOLT, HEX.SOCKET HEAD
YAMAHA	YSM20	90990-01J039	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-03018	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	92B12-05012	SCREW, HEX. SOCKET COUNTERSUNK HEAD CAP
YAMAHA	YSM20	99480-04010	PIN,PARALLEL
YAMAHA	YSM20	99480-06012	PIN,PARALLEL
YAMAHA	YSM20	91312-05020	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	99480-04008	PIN,PARALLEL
YAMAHA	YSM20	KLW-M3701-01	BASE,FES
YAMAHA	YSM20	KLW-M3704-00	BRKT.,BOARD
YAMAHA	YSM20	KLW-M3711-00	BLOCK,COVER
YAMAHA	YSM20	KLW-M3712-01	COVER,TAPE GUIDE
YAMAHA	YSM20	KLW-M3713-00	HOLDER,PIN
YAMAHA	YSM20	KLW-M3714-00	PIN,MARK
YAMAHA	YSM20	KLW-M37AF-00	BANK COVER ASSY.
YAMAHA	YSM20	KLW-M4476-01	FDR.CTRL.BOARD ASSY
YAMAHA	YSM20	90990-01J065	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	95302-08700	NUT HEXAGON
YAMAHA	YSM20	98902-03004	SCREW BINDING HEAD
YAMAHA	YSM20	99480-03008	PIN,PARALLEL
YAMAHA	YSM20	KHJ-M668A-00	HNS,RS232C

YAMAHA Sparepart list

YAMAHA	YSM20	KHY-M372M-00	SCREW,STAD
YAMAHA	YSM20	KHY-M372P-00	SUPPORT,LEVER
YAMAHA	YSM20	KHY-M372R-00	GUIDE,FEEDER UNDER
YAMAHA	YSM20	KHY-M372S-01	SPRING,SUPPORT
YAMAHA	YSM20	KHY-M66TE-00	HNS,F.CTRL – FDR.
YAMAHA	YSM20	KKG-M372B-00	PLATE,CONNECTOR
YAMAHA	YSM20	KKG-M372R-00	GUIDE,FEEDER UNDER
YAMAHA	YSM20	KKU-M1138-00	CAM FOLLOWER
YAMAHA	YSM20	KLW-M3705-00	COVER,FR.
YAMAHA	YSM20	KLW-M3707-01	BRKT.,FAN
YAMAHA	YSM20	KLW-M3708-01	COVER,FOLLWER L
YAMAHA	YSM20	KLW-M3709-01	COVER,FOLLWER R
YAMAHA	YSM20	KLW-M370C-01	COVER,BOTTOM
YAMAHA	YSM20	KLW-M370D-00	COVER,BOTTOM 2
YAMAHA	YSM20	KLW-M370H-00	BRKT.,CONNECTOR
YAMAHA	YSM20	KLW-M37AC-00	CONNECTOR ASSY.
YAMAHA	YSM20	KLW-M37AD-00	FR.COVER ASSY.
YAMAHA	YSM20	KLW-M37AE-00	BOTTOM COVER ASSY.
YAMAHA	YSM20	KLW-M6178-00	FAN MOTOR ASSY
YAMAHA	YSM20	KV8-M3758-00	SEAL DUMP
YAMAHA	YSM20	90990-41J167	COLLAR
YAMAHA	YSM20	91312-04018	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M3706-00	BRKT.,COVER
YAMAHA	YSM20	KLW-M370A-00	ROLLER FOLLWER
YAMAHA	YSM20	KLW-M370B-00	REAMER BOLT
YAMAHA	YSM20	KLW-M370J-00	GUIDE,L
YAMAHA	YSM20	KLW-M370K-00	GUIDE,R
YAMAHA	YSM20	90990-23J031	GROMMET
YAMAHA	YSM20	91312-04005	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KKU-M1138-000	CAM FOLLOWER
YAMAHA	YSM20	KLF-M375X-00	GUIDE,FEEDER UNDER
YAMAHA	YSM20	KLW-M3705-11	COVER,FR.
YAMAHA	YSM20	KLW-M370D-10	COVER,BOTTOM 2
YAMAHA	YSM20	KLW-M370E-00	COVER,BOTTOM 3
YAMAHA	YSM20	KLF-M375X-50	GUIDE,FEEDER UNDER
YAMAHA	YSM20	KLW-M37AD-10	FR.COVER ASSY.
YAMAHA	YSM20	KLW-M37AE-10	BOTTOM COVER ASSY.
YAMAHA	YSM20	90990-28J186	WASHER,PLAIN
YAMAHA	YSM20	90990-41J178	COLLAR
YAMAHA	YSM20	92B12-06012	SCREW, HEX. SOCKET COUNTERSUNK HEAD CAP
YAMAHA	YSM20	92902-04600	WASHER,PLAIN
YAMAHA	YSM20	KHW-M1385-00	SPACER
YAMAHA	YSM20	KHY-M373C-10	CHAIN
YAMAHA	YSM20	90990-01J153	BOLT,HEX.SOCKET HEAD
YAMAHA	YSM20	KHY-M374C-00	CASTER
YAMAHA	YSM20	KHY-M3R15-00	ROLLER
YAMAHA	YSM20	KLW-M372T-00	SHAFT,ROLLER
YAMAHA	YSM20	KHY-M3R23-00	COLLAR,PARTITION
YAMAHA	YSM20	KHY-M3S15-00	ROLLER 2

YAMAHA Sparepart list

YAMAHA	YSM20	KHY-M3R14-11	WASHER
YAMAHA	YSM20	KLW-M3720-11	SIDE COVER ASSY.
YAMAHA	YSM20	KLW-M372A-10	COVER,SIDE R
YAMAHA	YSM20	KLW-M372B-10	COVER,SIDE L
YAMAHA	YSM20	KLW-M372C-01	BRKT.,ADJUST BOLT
YAMAHA	YSM20	KLW-M372D-01	FRAME,BASE
YAMAHA	YSM20	KLW-M372E-01	COVER,UNDER
YAMAHA	YSM20	KLW-M372F-00	PLATE,HANDLE
YAMAHA	YSM20	KLF-M3R10-01	REEL HOLDER
YAMAHA	YSM20	KM0-M3741-00	CASTER 63
YAMAHA	YSM20	KV8-M3734-10	BOLT
YAMAHA	YSM20	KV8-M3735-01	BRACKET
YAMAHA	YSM20	98907-04006	SCREW BINDING HEAD
YAMAHA	YSM20	91312-06016	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-06030	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M3722-00	BASE SUB ASSY.
YAMAHA	YSM20	KLW-M375A-00	SMEMA BLOCK 1,FES
YAMAHA	YSM20	KLW-M375B-00	SMEMA BLOCK 2,FES
YAMAHA	YSM20	KLW-M375C-00	CHAIN
YAMAHA	YSM20	KHY-M373D-00	BOLT,HEX.SOCKET HEAD
YAMAHA	YSM20	KHY-M3R16-00	PARTITION
YAMAHA	YSM20	KKG-M3R09-00	SHAFT,ROLLER
YAMAHA	YSM20	KLF-M3R13-00	COLLAR
YAMAHA	YSM20	KLW-M372C-00	BRKT.,ADJUST BOLT
YAMAHA	YSM20	KLW-M372D-00	FRAME,BASE
YAMAHA	YSM20	KLW-M372E-00	COVER,UNDER
YAMAHA	YSM20	KLW-M3R10-00	REEL HOLDER
YAMAHA	YSM20	KLW-M3720-10	SIDE COVER ASSY.
YAMAHA	YSM20	90990-28J142	WASHER,PLAIN
YAMAHA	YSM20	90990-41J123	COLLAR
YAMAHA	YSM20	91312-05016	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M3723-00	PLATE,ARM R
YAMAHA	YSM20	KLW-M3724-00	PLATE,ARM L
YAMAHA	YSM20	KLW-M3725-00	BRKT.,FIX
YAMAHA	YSM20	KLW-M372G-00	BASE,ARM
YAMAHA	YSM20	KLW-M372H-00	SHAFT
YAMAHA	YSM20	KLW-M372J-00	COLLAR,LOWER
YAMAHA	YSM20	KLW-M372K-00	COLLAR,UPPER
YAMAHA	YSM20	KLW-M372L-01	SPRING
YAMAHA	YSM20	KLW-M372M-01	FRAME,MAIN
YAMAHA	YSM20	KLW-M372M-02	FRAME,MAIN
YAMAHA	YSM20	KLW-M372N-00	GUIDE,SHAFT
YAMAHA	YSM20	KLW-M372P-01	BLOCK,GUIDE 1
YAMAHA	YSM20	KLW-M372R-00	BLOCK,GUIDE
YAMAHA	YSM20	KLW-M372S-00	BRKT.,GUIDE
YAMAHA	YSM20	91312-06020	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M37A1-00	FES32 CARRIAGE ASSY.
YAMAHA	YSM20	KLW-M37A1-10	FES32 CARRIAGE ASSY.
YAMAHA	YSM20	90990-01J074	BOLT HEX,SOCKET HEAD

YAMAHA Sparepart list

YAMAHA	YSM20	91317-04018	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91317-04016	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91317-04014	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	98707-03006	SCREW,FLAT HEAD
YAMAHA	YSM20	KLW-M373S-00	PLATE,WEIGHT
YAMAHA	YSM20	KLW-M373S-01	PLATE,WEIGHT
YAMAHA	YSM20	KLW-M373T-01	COVER,SS R
YAMAHA	YSM20	KLW-M373T-02	COVER,SS R
YAMAHA	YSM20	KLW-M373U-01	COVER,SS L
YAMAHA	YSM20	KLW-M373U-02	COVER,SS L
YAMAHA	YSM20	KLW-M373V-01	BRKT.,SS COVER R
YAMAHA	YSM20	KLW-M373V-02	BRKT.,SS COVER R
YAMAHA	YSM20	KLW-M373V-03	BRKT.,SS COVER R
YAMAHA	YSM20	KLW-M373W-01	BRKT.,SS COVER L
YAMAHA	YSM20	KLW-M373W-02	BRKT.,SS COVER L
YAMAHA	YSM20	KLW-M373W-03	BRKT.,SS COVER L
YAMAHA	YSM20	KLW-M37A2-00	FES32 COVER ASSY.
YAMAHA	YSM20	90990-01J164	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90990-41J205	COLLAR
YAMAHA	YSM20	91312-06025	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-08020	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M3J0C-00	BLOCK,STOPPER L
YAMAHA	YSM20	KLW-M3J0D-00	BLOCK,STOPPER R
YAMAHA	YSM20	KLW-M3J0F-00	STOPPER
YAMAHA	YSM20	KLW-M3J11-00	PLATE,GUIDE L
YAMAHA	YSM20	KLW-M3J12-00	PLATE,GUIDE R
YAMAHA	YSM20	KLW-M3J13-00	GUIDE,FES
YAMAHA	YSM20	KLW-M3J14-00	COVER,CLAMP
YAMAHA	YSM20	KLW-M3J1B-01	COVER,UPPER
YAMAHA	YSM20	KLW-M3J1C-00	COVER,CONNECTOR L
YAMAHA	YSM20	KLW-M3J1D-00	COVER,CONNECTOR R
YAMAHA	YSM20	KLW-M3J1G-00	COVER,CLAMP L
YAMAHA	YSM20	KLW-M3J1H-00	COVER,CLAMP R
YAMAHA	YSM20	KLW-M3J1J-00	COVER,CLAMP FRONT
YAMAHA	YSM20	KLW-M3JA0-00	C/U MAIN ASSY.
YAMAHA	YSM20	KLW-M653T-00	SEN.F1 CART FWD ASSY
YAMAHA	YSM20	KLW-M653T-10	SEN.F2 CART FWD ASSY
YAMAHA	YSM20	KLW-M653T-20	SEN.R1 CART FWD ASSY
YAMAHA	YSM20	KLW-M653T-30	SEN.R2 CART FWD ASSY
YAMAHA	YSM20	92012-04006	BOLT, BOTTON HEAD
YAMAHA	YSM20	98902-03010	SCREW BINDING HEAD
YAMAHA	YSM20	KLW-M3JA1-00	FES GUIDE ASSY.
YAMAHA	YSM20	KLW-M3JA2-00	C/U COVER ASSY.
YAMAHA	YSM20	\$NK-2N	NYLON CLIP
YAMAHA	YSM20	90112-02J006	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90K41-001320	LABEL,CAUTION
YAMAHA	YSM20	90K41-001620	LABEL,CAUTION
YAMAHA	YSM20	91312-05014	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M653V-00	SENSOR,FDR.FLT.ASSY

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M653V-10	SENSOR,FDR.FLT.ASSY
YAMAHA	YSM20	KGS-M3906-00	BRACKET 6
YAMAHA	YSM20	KHY-M3901-00	BRACKET SENSOR 2
YAMAHA	YSM20	KHY-M3910-00	BRACKET SENSOR 1
YAMAHA	YSM20	KHY-M3951-00	PLATE SENSOR
YAMAHA	YSM20	KHY-M3952-00	PLATE SENSOR
YAMAHA	YSM20	KHY-M3953-00	BRACKET SENSOR 3
YAMAHA	YSM20	KLW-M3902-00	BRKT.,SENSOR L
YAMAHA	YSM20	KLW-M3904-00	BRKT.,SENSOR R
YAMAHA	YSM20	KLW-M3905-00	PLATE,NUT
YAMAHA	YSM20	KLW-M3907-00	BLOCK,SENSOR
YAMAHA	YSM20	KLW-M3908-00	STAY,SENSOR
YAMAHA	YSM20	KLW-M3909-00	COVER,SENSOR
YAMAHA	YSM20	91312-03004	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-03016	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-06014	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-06022	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHY-M371A-02	PLATE,FRONT
YAMAHA	YSM20	KHY-M379K-01	LABEL,LED POSI.
YAMAHA	YSM20	KHY-M6177-00	FAN MOTOR
YAMAHA	YSM20	KLF-M375H-00	RAIL,GUIDE 12P
YAMAHA	YSM20	KLW-M3401-01	BASE,FDR.70
YAMAHA	YSM20	KLW-M3402-00	COVER,BOARD
YAMAHA	YSM20	KLW-M3403-00	COVER,BOTTOM
YAMAHA	YSM20	KLW-M340F-00	BRACKET,BOARD
YAMAHA	YSM20	KLW-M340H-00	PLATE,INDICATOR
YAMAHA	YSM20	KLW-M340J-00	PLATE,CONNECTOR
YAMAHA	YSM20	KLW-M3430-00	LABEL,FEEDER 70-12P
YAMAHA	YSM20	KLW-M349J-01	LABEL,INDICATOR 70
YAMAHA	YSM20	KLW-M34J1-00	PLATE,FEEDER PSI.
YAMAHA	YSM20	KLW-M371B-00	SHAFT GUIDE
YAMAHA	YSM20	KLW-M37E1-01	LIGHT GUIDE,11
YAMAHA	YSM20	KLW-M4476-12	FDR.CTRL.BOARD ASSY
YAMAHA	YSM20	92902-06600	WASHER,PLAIN
YAMAHA	YSM20	99480-04012	PIN,PARALLEL
YAMAHA	YSM20	KLW-M34A2-00	INDICATOR ASSY.
YAMAHA	YSM20	\$UYD6-4	JOINT
YAMAHA	YSM20	90990-42J047	JOINT
YAMAHA	YSM20	91312-06008	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHJ-M668A-10	HNS,CN41-RS232C
YAMAHA	YSM20	KLF-M375N-00	GUIDE,FEEDER UNDER
YAMAHA	YSM20	KLW-M340K-00	BRACKET,MANIFOLD
YAMAHA	YSM20	KLW-M340P-00	COVER,BASE
YAMAHA	YSM20	KLW-M34B0-00	FIX70 MANIFOLD ASSY.
YAMAHA	YSM20	90990-46J011	BOLT, THIN HEAD
YAMAHA	YSM20	91312-03012	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHN-M22AD-00	GREASE NIPPLE
YAMAHA	YSM20	KHY-M266D-00	JOINT
YAMAHA	YSM20	KKE-M220F-02	CAMERA SELECTOR

YAMAHA Sparepart list

YAMAHA	YSM20	KLA-M4506-00	HEAD I/O UNIT ASSY
YAMAHA	YSM20	KLF-M2256-00	GRIP
YAMAHA	YSM20	KLF-M6185-C0	FAN MOTOR ASSY.
YAMAHA	YSM20	KLF-M657H-00	ADJUSTABLE CLAMP
YAMAHA	YSM20	KLW-M2231-00	FRME,HEAD SERVO
YAMAHA	YSM20	KLW-M2235-00	BRACKET,I/O
YAMAHA	YSM20	KLW-M2238-00	STAY,PCB
YAMAHA	YSM20	KLW-M2239-00	COVER,TOP
YAMAHA	YSM20	KLW-M223A-00	STAY,DUCT
YAMAHA	YSM20	KLW-M223B-00	BRACKET,L
YAMAHA	YSM20	KLW-M223C-00	COVER,MOUNT
YAMAHA	YSM20	KLW-M223D-00	BRACKET,R
YAMAHA	YSM20	KLW-M223E-00	STAY,HNS.
YAMAHA	YSM20	KLW-M223F-00	COVER,HNS.
YAMAHA	YSM20	KLW-M223J-00	STAY,SCR
YAMAHA	YSM20	KLW-M223K-00	STAY,HNS. 3
YAMAHA	YSM20	KLW-M223L-00	STAY,HNS. 4
YAMAHA	YSM20	KLW-M223N-00	HOLDER,HANDLE
YAMAHA	YSM20	KLW-M223R-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M223S-00	COVER,SCR
YAMAHA	YSM20	KLW-M5802-46	HEAD SERVO UNIT ASSY
YAMAHA	YSM20	97602-03306	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	\$US10	JOINT
YAMAHA	YSM20	90990-01J032	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90K41-001430	LABEL,CAUTION
YAMAHA	YSM20	90KA1-904503	AC SERVO MOTOR
YAMAHA	YSM20	91312-06018	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	97602-03308	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	98902-03005	SCREW BINDING HEAD
YAMAHA	YSM20	KGT-M2266-10	PLATE, NUT
YAMAHA	YSM20	KGT-M71ST-50	STICKER,HEAD
YAMAHA	YSM20	KHY-M221A-A0	COVER DUCT ASSY.
YAMAHA	YSM20	KHY-M2268-00	BRACKET 1, TAPE
YAMAHA	YSM20	KKE-M2269-00	BRACKET 2,TAPE
YAMAHA	YSM20	KKE-M226D-00	PLATE,NUT
YAMAHA	YSM20	KLW-M220A-00	TAPE 1,X DUCT
YAMAHA	YSM20	KLW-M220B-00	TAPE 2,X DUCT
YAMAHA	YSM20	KLW-M220C-00	TAPE 3,X DUCT
YAMAHA	YSM20	KLW-M220D-00	TAPE,X AXIS
YAMAHA	YSM20	KLW-M2252-00	STOPPER
YAMAHA	YSM20	KLW-M2267-A0	CABLE DUCT ASSY.
YAMAHA	YSM20	KLW-M226A-01	BRACKET,CABLE DUCT
YAMAHA	YSM20	KLW-M226B-01	COVER 1,BACK X AXIS
YAMAHA	YSM20	KLW-M226C-01	COVER 2,BACK X AXIS
YAMAHA	YSM20	KLW-M226C-02	COVER 2,BACK X AXIS
YAMAHA	YSM20	KLW-M227G-00	COVER,B.S.
YAMAHA	YSM20	KLW-M2282-00	DOG,ORIGIN
YAMAHA	YSM20	KLW-M2284-00	BRACKET,SENSOR
YAMAHA	YSM20	KLW-M2285-00	DOG,SECOND LIMIT

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M22C5-00	UNDER COVER,X AXIS
YAMAHA	YSM20	KLW-M653B-00	SENSOR,X ORG ASSY
YAMAHA	YSM20	KLW-M653F-00	SENSOR,X OT1 ASSY
YAMAHA	YSM20	KLW-M653F-10	SENSOR,X OT2 ASSY
YAMAHA	YSM20	98902-04006	SCREW BINDING HEAD
YAMAHA	YSM20	90990-26J022	BEARING
YAMAHA	YSM20	91312-05018	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KG2-M9173-00	LOCK NUT
YAMAHA	YSM20	KGS-M2628-00	LOCK NUT
YAMAHA	YSM20	KHN-M2221-00	SUPPORT UNIT
YAMAHA	YSM20	KHN-M2248-00	SPACER
YAMAHA	YSM20	KHN-M224D-00	SPACER
YAMAHA	YSM20	KHN-M224J-00	COLLAR A
YAMAHA	YSM20	KHN-M224K-00	COLLAR B
YAMAHA	YSM20	KHN-M22F4-00	WASHER,SWR04
YAMAHA	YSM20	KHN-M22F6-00	WASHER,SWR06
YAMAHA	YSM20	KHN-M22F8-00	WASHER,SWR08
YAMAHA	YSM20	KHY-M2240-00	SLEEVE,BRG.
YAMAHA	YSM20	KJV-M3422-00	O-RING
YAMAHA	YSM20	KKE-M2241-00	HOLDER,MOTOR X
YAMAHA	YSM20	KLW-M2211-00	FRAME,X AXIS
YAMAHA	YSM20	KLW-M2220-00	COUPLING,X AXIS
YAMAHA	YSM20	KLW-M2242-00	HOLDER,BRG.
YAMAHA	YSM20	KLW-M224H-00	DAMPER
YAMAHA	YSM20	KLW-M2261-A0	HEAD HOLDER ASSY.
YAMAHA	YSM20	KLW-M2261-A1	HEAD HOLDER ASSY.
YAMAHA	YSM20	KLW-M2271-00	BALL SCREW
YAMAHA	YSM20	KLW-M2276-00	GUIDE SET,X AXIS
YAMAHA	YSM20	KLW-M2613-00	PLATE A
YAMAHA	YSM20	KLW-M2614-01	PLATE B
YAMAHA	YSM20	KV7-M2231-00	SPACER R,NUT
YAMAHA	YSM20	91312-08025	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	92A08-04304	SCREW SET
YAMAHA	YSM20	KLW-M0201-00	X AXIS SUB ASSY.
YAMAHA	YSM20	\$CTAM2	ANCHOR MOUNT
YAMAHA	YSM20	91312-04035	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHY-M2669-00	BRACKET,HARNESS
YAMAHA	YSM20	KJ3-M4187-00	FAN GUARD
YAMAHA	YSM20	KLW-M260B-00	TAPE 1,Y DUCT
YAMAHA	YSM20	KLW-M260C-00	TAPE 2,Y DUCT
YAMAHA	YSM20	KLW-M260D-00	TAPE 3,Y DUCT
YAMAHA	YSM20	KLW-M2678-00	DUCT,CABLE
YAMAHA	YSM20	KLW-M2695-03	BRACKET,Y AXIS DUCT
YAMAHA	YSM20	KLW-M2698-01	BRIDGE,HNS.
YAMAHA	YSM20	KLW-M26F1-01	FRAME 1
YAMAHA	YSM20	KLW-M26F3-00	BRKT.,FRAME
YAMAHA	YSM20	KLW-M26F4-01	STAY,CABLE
YAMAHA	YSM20	KLW-M26F6-00	BRKT.,CABLE 1
YAMAHA	YSM20	KLW-M26F7-00	BRKT.,FAN 1

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M26FB-01	BRKT.2,COVER 1
YAMAHA	YSM20	KLW-M26FC-00	BRKT.3,COVER 1
YAMAHA	YSM20	KLW-M26FE-01	AIR DUCT,FAN 2
YAMAHA	YSM20	KLW-M26FF-01	BRKT.,LED
YAMAHA	YSM20	KLW-M26FF-11	BRACKET
YAMAHA	YSM20	KLW-M26FG-00	COVER,FAN
YAMAHA	YSM20	KLW-M26FH-00	BRKT.,SW.HNS.1
YAMAHA	YSM20	KLW-M26FJ-00	BRKT.,SW.HNS.2
YAMAHA	YSM20	97602-04308	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	98502-03005	SCREW PAN HEAD
YAMAHA	YSM20	KLW-M2678-A0	CABLE DUCT ASSY.
YAMAHA	YSM20	KV7-M2266-00	PLATE, NUT
YAMAHA	YSM20	\$NK-4N	NYLON CLIP
YAMAHA	YSM20	90990-30J090	SHIM(S)
YAMAHA	YSM20	90990-30J091	SHIM(S)
YAMAHA	YSM20	90990-01J110	BOLT,HEX.S/HEAD WW
YAMAHA	YSM20	90K41-001400	LABEL,CAUTION
YAMAHA	YSM20	90K41-001570	LABEL,CAUTION
YAMAHA	YSM20	90990-41J180	COLLAR
YAMAHA	YSM20	KH2-M1324-01	GRIP
YAMAHA	YSM20	KHW-M2654-00	PLATE,DAMPER
YAMAHA	YSM20	KKE-M2654-00	PLATE , DAMPER
YAMAHA	YSM20	KKE-M2654-50	PLATE , DAMPER
YAMAHA	YSM20	KLF-M4187-10	FAN GUARD 80MM
YAMAHA	YSM20	KLW-M2659-00	BRACKET,HANDLE
YAMAHA	YSM20	KLW-M2696-00	DOG,COL.
YAMAHA	YSM20	KLW-M269A-00	PLATE,HNS.A
YAMAHA	YSM20	KLW-M269B-00	PLATE,HNS.B
YAMAHA	YSM20	KLW-M26F5-00	BRACKET,DAMPER
YAMAHA	YSM20	KLW-M26T3-00	COVER,LINEAR 2
YAMAHA	YSM20	KLW-M26T4-00	COVER,LINEAR 1
YAMAHA	YSM20	KLW-M26TF-00	PLATE,FAN
YAMAHA	YSM20	KLW-M6185-C0	FAN MOTOR ASSY
YAMAHA	YSM20	KLW-M653G-00	SENSOR,Y SAFE ASSY
YAMAHA	YSM20	KV7-M2651-00	DAMPER, STOPPER
YAMAHA	YSM20	97602-04310	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	KLW-M26TF-A0	FAN ASSY.
YAMAHA	YSM20	90990-01J003	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90990-46J010	BOLT, THIN HEAD
YAMAHA	YSM20	KKE-M26C8-00	PLATE 1
YAMAHA	YSM20	KKE-M26CK-00	PLATE 2
YAMAHA	YSM20	KLW-M260B-10	TAPE 1,Y DUCT
YAMAHA	YSM20	KLW-M260C-10	TAPE 2,Y DUCT
YAMAHA	YSM20	KLW-M260D-10	TAPE 3,Y DUCT
YAMAHA	YSM20	KLW-M2676-10	GUIDE SET,Y AXIS
YAMAHA	YSM20	KLW-M2678-10	DUCT,CABLE
YAMAHA	YSM20	KLW-M2682-10	DOG,ORIGIN
YAMAHA	YSM20	KLW-M2684-00	STAY,DOG
YAMAHA	YSM20	KLW-M2685-00	DOG 2,SECOND LIMIT

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M2691-00	STAY,SENSOR
YAMAHA	YSM20	KLW-M26CB-00	STATOR A ASSY.
YAMAHA	YSM20	KLW-M26CJ-00	COIL,Y AXIS
YAMAHA	YSM20	KLW-M26CP-00	STATOR C ASSY.
YAMAHA	YSM20	KLW-M26CR-00	STATOR D ASSY.
YAMAHA	YSM20	KLW-M26FA-01	BRACKET,DAMPER 2
YAMAHA	YSM20	KLW-M26FD-00	PLATE,DUCT Y
YAMAHA	YSM20	KLW-M26TD-00	COVER,LINEAR 3
YAMAHA	YSM20	KLW-M26TE-00	COVER,LINEAR 4
YAMAHA	YSM20	KLW-M26TG-00	COVER,LINEAR 2
YAMAHA	YSM20	KLW-M26TH-00	COVER,LINEAR 1
YAMAHA	YSM20	KLW-M653A-10	SENSOR,Y ORG ASSY
YAMAHA	YSM20	KLW-M653E-10	SENSOR,Y OT ASSY
YAMAHA	YSM20	91312-06075	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	97602-03310	SCREW PAN HEAD W/WASHER
YAMAHA	YSM20	90563-04J100	SPACER
YAMAHA	YSM20	90990-09J004	SCREW, FLAT HEAD
YAMAHA	YSM20	91312-03008	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHT-M76B0-00	LENS FID.
YAMAHA	YSM20	KJX-M7210-00	CCD CAMERA
YAMAHA	YSM20	KLW-M71C1-00	BRACKET,RIGHT
YAMAHA	YSM20	KLW-M71C2-00	BRACKET,LEFT
YAMAHA	YSM20	KLW-M71C6-00	COVER,CAMERA R
YAMAHA	YSM20	KLW-M71C8-00	COVER,CAMERA L
YAMAHA	YSM20	KLW-M7401-00	BRKT.,COVER HEAD
YAMAHA	YSM20	KLW-M7402-00	COVER,HEAD 1
YAMAHA	YSM20	KLW-M7403-00	COVER,HEAD 2
YAMAHA	YSM20	KLW-M7405-00	COVER,UNDER
YAMAHA	YSM20	KLW-M7406-00	BRKT.,Z AXIS HNS.
YAMAHA	YSM20	KLW-M7408-00	BRKT.,EARTH
YAMAHA	YSM20	KLW-M740A-00	COVER,UNDER
YAMAHA	YSM20	KLW-M740C-00	HOLDER,TUBE
YAMAHA	YSM20	KLW-M7450-00	EJECTOR ASSY.
YAMAHA	YSM20	KLW-M7451-00	BRKT.,EJECTOR
YAMAHA	YSM20	KLW-M7452-00	BRKT.,HNS.
YAMAHA	YSM20	KLW-M7453-00	COVER,BOARD
YAMAHA	YSM20	KLW-M7601-00	HOLDER,CAMERA
YAMAHA	YSM20	KLW-M7610-00	VISION ATTACHMENT L
YAMAHA	YSM20	KLW-M7620-00	VISION ATTACHMENT R
YAMAHA	YSM20	KLW-M76A0-00	FIDUCIAL LIGHT ASSY.
YAMAHA	YSM20	KLW-M76L4-00	STAY,FID. LIGHT
YAMAHA	YSM20	91312-04040	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91317-03005	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91317-04008	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	92012-03005	BOLT BUTTON HEAD
YAMAHA	YSM20	90112-2AJ010	BOLT, HEX.SOCKET HEAD
YAMAHA	YSM20	90152-03J03	SCREW SET
YAMAHA	YSM20	90990-28J140	WASHER,PLAIN
YAMAHA	YSM20	90K2L-0G1111	AC SERVO MOTOR

YAMAHA Sparepart list

YAMAHA	YSM20	90K2L-0G1112	AC SERVO MOTOR
YAMAHA	YSM20	90K2L-0G1113	AC SERVO MOTOR
YAMAHA	YSM20	90K2L-0G1128	AC SERVO MOTOR
YAMAHA	YSM20	90K2L-0G1129	AC SERVO MOTOR
YAMAHA	YSM20	KJX-M7C4A-00	COLLAR,BEARING
YAMAHA	YSM20	KLW-M7431-00	PLATE,MOTOR R
YAMAHA	YSM20	KLW-M7432-00	PULLEY,MOTOR R
YAMAHA	YSM20	KLW-M7433-00	SHEET
YAMAHA	YSM20	KLW-M7442-00	BLOCK,SHAFT
YAMAHA	YSM20	KLW-M7445-00	PLATE,SPLINE
YAMAHA	YSM20	KLW-M7449-00	PLATE,SPLINE
YAMAHA	YSM20	KLW-M744B-00	PLATE,SPRING
YAMAHA	YSM20	KLW-M74RA-00	BELT
YAMAHA	YSM20	91317-03008	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	99480-03010	PIN,PARALLEL
YAMAHA	YSM20	\$PLH4-M5M	JOINT
YAMAHA	YSM20	\$UEF	JOINT
YAMAHA	YSM20	90112-2AJ008	BOLT, HEX.SOCKET HEAD
YAMAHA	YSM20	90112-2AJ012	BOLT, HEX.SOCKET HEAD
YAMAHA	YSM20	90115-02J004	BOLT, HEX. SOCKET HEAD
YAMAHA	YSM20	90440-10J008	CIRCLIP
YAMAHA	YSM20	90933-02J685	BEARING
YAMAHA	YSM20	90990-01J057	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90990-16J002	NUT, U & NUT, SELF LOCKING
YAMAHA	YSM20	90990-28J045	WASHER,PLAIN
YAMAHA	YSM20	90990-28J046	WASHER,PLAIN
YAMAHA	YSM20	90990-29J033	SHIM
YAMAHA	YSM20	91609-16006	PIN, SPRING
YAMAHA	YSM20	95602-05100	NUT, U
YAMAHA	YSM20	KHN-M7145-00	NUT,SPLINE
YAMAHA	YSM20	KJX-M7C37-00	COLLAR,PULLY
YAMAHA	YSM20	KJX-M7C4E-00	O-RING
YAMAHA	YSM20	KJX-M7C4N-00	WAVE WASHER
YAMAHA	YSM20	KLW-M7441-00	SPLINE SHAFT
YAMAHA	YSM20	KLW-M7443-00	PULLEY,R
YAMAHA	YSM20	KLW-M7446-00	ARM
YAMAHA	YSM20	KLW-M7447-00	BLOCK,SPLINE
YAMAHA	YSM20	KLW-M744A-00	PLATE,BRG.
YAMAHA	YSM20	KLW-M744C-00	STOPPER,JOINT
YAMAHA	YSM20	KLW-M74D0-00	ROLLER LOCK ASSY.
YAMAHA	YSM20	KV7-M8171-00	PLATE,SPRING
YAMAHA	YSM20	KV7-M81D1-00	ARM,NOZZLE
YAMAHA	YSM20	KV7-M81D3-01	PIN
YAMAHA	YSM20	KV7-M81D4-00	ROLLER
YAMAHA	YSM20	90990-22J009	PACKING
YAMAHA	YSM20	KLW-M741S-A0	SHAFT,SPARE
YAMAHA	YSM20	90933-02J605	BEARING
YAMAHA	YSM20	90990-02J004	SCREW, SET
YAMAHA	YSM20	90990-18J033	PIN,PARALLEL

YAMAHA Sparepart list

YAMAHA	YSM20	90990-41J148	COLLAR
YAMAHA	YSM20	90K20-0F1503	MOTOR
YAMAHA	YSM20	90K20-0F1504	MOTOR
YAMAHA	YSM20	90K20-0F1505	MOTOR
YAMAHA	YSM20	90K20-0F1506	MOTOR
YAMAHA	YSM20	90K20-0F1507	MOTOR
YAMAHA	YSM20	KHN-M712A-00	BEARING
YAMAHA	YSM20	KHN-M712M-00	COUPLING
YAMAHA	YSM20	KJX-M711P-00	CIRCLIP 5
YAMAHA	YSM20	KLH-M7C2P-00	SPACER
YAMAHA	YSM20	KLW-M7411-00	PLATE,HEAD
YAMAHA	YSM20	KLW-M7412-00	PLATE L
YAMAHA	YSM20	KLW-M7413-00	PLATE R
YAMAHA	YSM20	KLW-M7414-00	HOLDER,MOTOR Z
YAMAHA	YSM20	KLW-M7415-00	HOLDER,BRG.
YAMAHA	YSM20	KLW-M7416-00	DAMPER Z
YAMAHA	YSM20	KLW-M7417-00	PLATE,BRG. Z
YAMAHA	YSM20	KLW-M7421-00	BALL SCREW
YAMAHA	YSM20	KLW-M7422-00	LOCK NUT,SCREW
YAMAHA	YSM20	KLW-M7424-00	HOLDER,NUT
YAMAHA	YSM20	KLW-M7425-00	GUIDE,Z
YAMAHA	YSM20	91312-03022	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-04030	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	99480-05010	PIN,PARALLEL
YAMAHA	YSM20	KLW-M7404-00	COLLAR,SPRING
YAMAHA	YSM20	KLW-M7409-00	SPRING,RETURN
YAMAHA	YSM20	90990-41J128	COLLAR
YAMAHA	YSM20	91312-05030	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M7921-00	BRKT.,LIGHT L
YAMAHA	YSM20	KLW-M7922-00	BRKT.,LIGHT R
YAMAHA	YSM20	KLW-M7923-00	COVER,LIGHT
YAMAHA	YSM20	KLW-M7924-00	BRKT.,LIGHT
YAMAHA	YSM20	KLW-M7925-00	SHEET
YAMAHA	YSM20	KLW-M7926-00	DIFFUSER
YAMAHA	YSM20	KLW-M7981-00	S.V.LIGHT BRD ASSY
YAMAHA	YSM20	99480-06018	PIN,PARALLEL
YAMAHA	YSM20	KLW-M79C0-00	S.V.CAM.ASSY.
YAMAHA	YSM20	KLW-M79L0-00	S.V.LIGHT ASSY.
YAMAHA	YSM20	Part No.	Part Name
YAMAHA	YSM20	KLW-M745A-02	EJECTOR
YAMAHA	YSM20	KLF-M7152-00	VALVE
YAMAHA	YSM20	KLF-M7153-00	VALVE
YAMAHA	YSM20	KLW-M7154-00	BIT
YAMAHA	YSM20	KLW-M7156-00	BIT CAP
YAMAHA	YSM20	KLW-M7157-00	EJECTOR
YAMAHA	YSM20	KLW-M7158-00	VALVE
YAMAHA	YSM20	KLW-M715A-00	MUFFLER
YAMAHA	YSM20	KLW-M715B-00	GASKET
YAMAHA	YSM20	KLW-M8527-00	FILTER

YAMAHA Sparepart list

YAMAHA	YSM20	KHY-M4592-10	VAC5 SENS BRD ASSY
YAMAHA	YSM20	98502-03008	SCREW,PAN HEAD
YAMAHA	YSM20	KLW-M74T1-00	TUBE
YAMAHA	YSM20	KLW-M7155-00	FILTER CAP
YAMAHA	YSM20	KLW-M7117-00	STOPPER
YAMAHA	YSM20	KLW-M71C3-00	STAY,EJECTOR
YAMAHA	YSM20	KLW-M71C4-00	STAY,HOSE
YAMAHA	YSM20	KLW-M71C5-00	BRACKET,CABLE
YAMAHA	YSM20	KLW-M71C7-00	BRACKET,CABLE
YAMAHA	YSM20	KLW-M71C9-00	PLATE 2,HARNESS
YAMAHA	YSM20	KLW-M71CB-00	PLATE,HARNESS
YAMAHA	YSM20	KLW-M71Y0-00	LABEL,HEAD SERIAL
YAMAHA	YSM20	90990-01J040	BOLT,HEX.SOCKET HEAD
YAMAHA	YSM20	90990-25J016	BEARING
YAMAHA	YSM20	90KB0-112503	MOTOR
YAMAHA	YSM20	90KB0-112504	MOTOR
YAMAHA	YSM20	91312-03030	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-05035	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHY-M7113-00	PLATE 2,BRG.
YAMAHA	YSM20	KHY-M7114-00	PLATE 3,BRG.
YAMAHA	YSM20	KHY-M7127-00	BLOCK 1,ADJUST
YAMAHA	YSM20	KHY-M7131-00	BELT 1
YAMAHA	YSM20	KHY-M7132-00	BELT 2
YAMAHA	YSM20	KKE-M7126-00	SHAFT 2,TENSION
YAMAHA	YSM20	KKE-M7128-00	SHAFT 3,TENSION
YAMAHA	YSM20	KKE-M7134-00	PLATE,SCREEN
YAMAHA	YSM20	KKE-M7135-00	PLATE,SCREEN
YAMAHA	YSM20	KLW-M7101-00	HOUSING,HEAD
YAMAHA	YSM20	KLW-M7102-00	PLATE,R MOTOR
YAMAHA	YSM20	KLW-M7125-00	STOPPER,R AXIS
YAMAHA	YSM20	KLW-M7129-00	BLOCK 2,ADJUST
YAMAHA	YSM20	KLW-M7131-00	PULLEY,R MOTOR
YAMAHA	YSM20	KLW-M7132-00	STOPPER 2,R AXIS
YAMAHA	YSM20	KLW-M7133-00	SHEET,SCREEN
YAMAHA	YSM20	KLW-M7138-00	PLATE
YAMAHA	YSM20	KV8-M7115-00	SHAFT 1,TENSION
YAMAHA	YSM20	92902-03600	WASHER,PLAIN
YAMAHA	YSM20	99009-07800	CIRCLIP
YAMAHA	YSM20	90990-01J020	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91317-03012	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	\$PF-M3	PLUG
YAMAHA	YSM20	90990-08J016	SCREW, PAN HEAD
YAMAHA	YSM20	90990-17J053	O-RING
YAMAHA	YSM20	KG7-M7137-A0	LEAF SPRING
YAMAHA	YSM20	KGS-M714W-03	PLATE,SPRING
YAMAHA	YSM20	KHY-M7105-00	HOLDER,NOZZLE
YAMAHA	YSM20	KKS-M7105-00	HOLDER,NOZZLE
YAMAHA	YSM20	KLW-M7107-A0	HEAD SHAFT 1 ASSY.
YAMAHA	YSM20	KLW-M7107-B0	HEAD SHAFT 2 ASSY.

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M7107-C0	HEAD SHAFT 1B ASSY.
YAMAHA	YSM20	KLW-M7107-D0	HEAD SHAFT 2B ASSY.
YAMAHA	YSM20	KLW-M711S-A0	SHAFT 1,SPARE
YAMAHA	YSM20	KLW-M711S-B0	SHAFT 2,SPARE
YAMAHA	YSM20	KHY-M7108-00	COLLAR,BRG.
YAMAHA	YSM20	90990-25J026	BEARING
YAMAHA	YSM20	90990-28J078	WASHER,PLAIN
YAMAHA	YSM20	91312-06060	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	99480-06014	PIN,PARALLEL
YAMAHA	YSM20	KHY-M71G3-00	SHAFT 1
YAMAHA	YSM20	KLW-M7103-00	PLATE,HEAD
YAMAHA	YSM20	KLW-M71G1-00	SIDE PLATE,R
YAMAHA	YSM20	KLW-M71G2-00	SIDE PLATE,L
YAMAHA	YSM20	KLW-M71G5-00	Z UNIT ASSY.
YAMAHA	YSM20	KLW-M7151-02	EJECTOR,RESIN
YAMAHA	YSM20	KHY-M4592-01	VAC SENSOR BRD ASSY
YAMAHA	YSM20	90563-23J060	SPACER
YAMAHA	YSM20	90112-2AJ005	BOLT, HEX.SOCKET HEAD
YAMAHA	YSM20	90990-01J106	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90990-01J107	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90990-08J018	SCREW, PAN HEAD
YAMAHA	YSM20	90990-08J020	SCREW, PAN HEAD
YAMAHA	YSM20	KHY-M7554-12	OF.LIGHT BRD.ASSY.
YAMAHA	YSM20	KHY-M7905-10	OF.SV.LIGHT BRD ASSY
YAMAHA	YSM20	KHY-M7A13-02	DIFFUSER, MAIN
YAMAHA	YSM20	KHY-M7A16-01	COVER,PRIZM
YAMAHA	YSM20	KHY-M7A31-01	BLOCK,LIGHT SIDE
YAMAHA	YSM20	KHY-M7A34-01	DIFFUSER, SIDE
YAMAHA	YSM20	KLW-M66JA-00	HNS,SCAN FLEX
YAMAHA	YSM20	KLW-M78H1-00	PLATE,CABLE
YAMAHA	YSM20	KLW-M78H2-00	BRACKET,CABLE
YAMAHA	YSM20	KLW-M78H3-00	TAPE,SCAN CABLE
YAMAHA	YSM20	KLW-M78H5-00	BRACKET,CONNECTOR
YAMAHA	YSM20	KLW-M78H6-00	PLATE,CLAMP
YAMAHA	YSM20	KLW-M78H7-00	COVER,SENSOR
YAMAHA	YSM20	KLW-M78H8-00	CLAMP,CABLE
YAMAHA	YSM20	KLW-M78H9-00	BRKT.,FIX
YAMAHA	YSM20	90990-08J026	SCREW, PAN HEAD
YAMAHA	YSM20	90990-11J001	SCREW, PAN HEAD W/W
YAMAHA	YSM20	90990-28J002	WASHER,PLAIN
YAMAHA	YSM20	KLW-M7850-00	SC MOTOR ASSY.
YAMAHA	YSM20	KLW-M78C0-00	SCAN CAM. ASSY.,CX.
YAMAHA	YSM20	KLW-M78H0-00	HNS.SCAN ASSY.
YAMAHA	YSM20	KHN-M7710-A4	NOZZLE 301A ASSY.
YAMAHA	YSM20	KHN-M7711-05	BODY,NOZZLE 301
YAMAHA	YSM20	KHN-M7713-00	SPRING
YAMAHA	YSM20	KHN-M7714-00	PIN
YAMAHA	YSM20	KHN-M7715-00	CLIP
YAMAHA	YSM20	KHN-M7720-A3	NOZZLE 302A ASSY.

YAMAHA Sparepart list

YAMAHA	YSM20	KHN-M7721-04	BODY, NOZZLE 302
YAMAHA	YSM20	KHY-M7740-A0	NOZZLE 303A/314A ASSY.
YAMAHA	YSM20	KHY-M7741-00	BODY, NOZZLE 303/314
YAMAHA	YSM20	KHY-M7750-A0	NOZZLE 304A/315A ASSY.
YAMAHA	YSM20	90990-17J013	O-RING
YAMAHA	YSM20	90990-17J081	O-RING
YAMAHA	YSM20	KHY-M7770-A0	NOZZLE 306A/317A ASSY.
YAMAHA	YSM20	KHY-M7771-00	BODY, NOZZLE 306/317
YAMAHA	YSM20	KHY-M77A0-A0	NOZZLE 310A ASSY.
YAMAHA	YSM20	KHY-M77A1-00	BODY, NOZZLE 310
YAMAHA	YSM20	KHY-M7710-A4	NOZZLE 311A ASSY.
YAMAHA	YSM20	KHY-M7711-03	BODY, NOZZLE 311
YAMAHA	YSM20	KHN-M7713-10	SPRING
YAMAHA	YSM20	KHY-M7720-A3	NOZZLE 312A ASSY.
YAMAHA	YSM20	KHY-M7721-02	BODY,NOZZLE 312
YAMAHA	YSM20	KHY-M7730-A2	NOZZLE 313A ASSY.
YAMAHA	YSM20	KHY-M7731-02	BODY,NOZZLE 313
YAMAHA	YSM20	KHY-M7780-A0	NOZZLE 307A/318A ASSY.
YAMAHA	YSM20	KHY-M7781-00	BODY, NOZZLE 307/318
YAMAHA	YSM20	KGS-M7742-00	LABEL,NOZZLE
YAMAHA	YSM20	90990-17J014	O-RING
YAMAHA	YSM20	90990-17J082	O-RING
YAMAHA	YSM20	\$SC4-M5A	SPEED CONTROLLER
YAMAHA	YSM20	\$US4	JOINT
YAMAHA	YSM20	90563-0AJ070	SPACER
YAMAHA	YSM20	90933-02J063	BEARING
YAMAHA	YSM20	90990-32J005	BOLT,FLANGE
YAMAHA	YSM20	90990-41J185	COLLAR
YAMAHA	YSM20	91312-03025	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91312-04016	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHW-M916A-00	BUSH
YAMAHA	YSM20	KHW-M916E-00	BUSH
YAMAHA	YSM20	KHW-M916G-00	COLLAR, JOINT
YAMAHA	YSM20	KHW-M916H-00	JOINT, CYL.
YAMAHA	YSM20	KLW-M653S-00	CYL.ANC OP/CL ASSY
YAMAHA	YSM20	KHY-M9614-00	STOPPER,CYLINDER
YAMAHA	YSM20	KHY-M9627-00	BLOCK,LINK
YAMAHA	YSM20	KHY-M9628-00	COLLAR,LINK
YAMAHA	YSM20	KHY-M9631-00	COLLAR,FLOATING
YAMAHA	YSM20	KHY-M9632-00	BLOCK,FLOATING
YAMAHA	YSM20	KKS-M9615-00	PLATE,CYLINDER
YAMAHA	YSM20	KKT-M9613-00	BLOCK,CYLINDER
YAMAHA	YSM20	KLW-M45BA-00	ANC CTRL BOARD ASSY
YAMAHA	YSM20	KLW-M96S1-A0	BOTTOM HOLDER ASSY.
YAMAHA	YSM20	KLW-M96S2-00	PLATE,SIDE
YAMAHA	YSM20	KLW-M96S3-00	SHAFT
YAMAHA	YSM20	KLW-M96S4-00	PLATE,MIDDLE
YAMAHA	YSM20	KLW-M96S5-00	PLATE,BASE
YAMAHA	YSM20	KLW-M96S6-00	BOARD,CLEAR

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M96S7-00	PLATE,LED SHIELD
YAMAHA	YSM20	KLW-M96S8-00	SUPPORT,STAND
YAMAHA	YSM20	KLW-M96SV-00	ANC VALVE ASSY.
YAMAHA	YSM20	91312-04022	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	95702-06500	NUT FLANGE
YAMAHA	YSM20	92012-04012	BOLT, BOTTON HEAD
YAMAHA	YSM20	KHY-M9621-A0	BASE,NOZZLE D ASSY
YAMAHA	YSM20	KHY-M9630-00	HOOK,BEARING
YAMAHA	YSM20	KKE-M9608-00	PIN,SLIDE
YAMAHA	YSM20	KKS-M9622-A1	SPACER3 ASSY.
YAMAHA	YSM20	KLW-M96H1-A0	HM NOZZLE HLD. ASSY.
YAMAHA	YSM20	KLW-M96H2-00	PLATE,CLAMP HM
YAMAHA	YSM20	KLW-M96H4-A0	FM NOZZLE HLD. ASSY.
YAMAHA	YSM20	KLW-M96H5-00	PLATE,CLAMP FM
YAMAHA	YSM20	KLW-M96H7-00	MIRROR,CENTER
YAMAHA	YSM20	KLW-M96H8-00	MIRROR,SIDE
YAMAHA	YSM20	KLW-M96H9-00	SPACER
YAMAHA	YSM20	KLW-M96HA-00	SHEET,CLAMP GUIDE
YAMAHA	YSM20	KGA-M921T-00	BOLT
YAMAHA	YSM20	KHY-M921G-01	BRKT.,DOG
YAMAHA	YSM20	KHY-M921N-01	JOINT A
YAMAHA	YSM20	KLW-M653D-00	SENSOR,PUA ORG ASSY
YAMAHA	YSM20	KLW-M653D-10	SENSOR,PUB ORG ASSY
YAMAHA	YSM20	KLW-M920A-00	PLATE 1(340×330)
YAMAHA	YSM20	KLW-M920B-00	STAY
YAMAHA	YSM20	KLW-M9217-00	BALL BUSH
YAMAHA	YSM20	KLW-M9218-00	SHAFT
YAMAHA	YSM20	KLW-M921H-02	PLATE,DOG
YAMAHA	YSM20	KLW-M921K-00	BRKT.,SENSOR
YAMAHA	YSM20	KLW-M9221-01	DAMPER
YAMAHA	YSM20	KHY-M920D-00	PUSH UP PIN UNIT
YAMAHA	YSM20	KLW-M9203-A0	STAY ASSY.
YAMAHA	YSM20	90990-28J076	WASHER,PLAIN
YAMAHA	YSM20	90K65-332G74	AC SERVO MOTOR
YAMAHA	YSM20	90K65-332P73	AC SERVO MOTOR
YAMAHA	YSM20	95602-10100	NUT, U
YAMAHA	YSM20	KKE-M9218-00	GROMMET
YAMAHA	YSM20	KKE-M921D-00	BELT 291-3GT-15
YAMAHA	YSM20	KLW-M921S-00	BRKT.,MOTOR
YAMAHA	YSM20	KV7-M9205-01	PULLEY 1:P22-3GT
YAMAHA	YSM20	KLW-M9206-A0	MOTOR ASSY.
YAMAHA	YSM20	KLW-M9208-A0	MOTOR ASSY.
YAMAHA	YSM20	90440-01J090	CIRCLIP
YAMAHA	YSM20	90933-01J001	BEARING
YAMAHA	YSM20	90933-01J007	BEARING
YAMAHA	YSM20	90933-01J300	BEARING
YAMAHA	YSM20	91312-04020	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHW-M9215-00	PULLEY:P60-3GT
YAMAHA	YSM20	KHW-M921A-00	BRKT.,TENSIONER

YAMAHA Sparepart list

YAMAHA	YSM20	KHW-M921B-00	STAY,ADJUST
YAMAHA	YSM20	KHW-M921C-00	SHAFT 1
YAMAHA	YSM20	KHW-M9222-00	POST
YAMAHA	YSM20	KHW-M9223-00	PULLEY:P40-3GT
YAMAHA	YSM20	KHY-M9211-00	HOLDER,BRG.
YAMAHA	YSM20	KHY-M9212-00	HOUSING
YAMAHA	YSM20	KHY-M921M-01	WASHER
YAMAHA	YSM20	KLW-M9201-A0	DRIVE UNIT ASSY.
YAMAHA	YSM20	KLW-M9204-A0	TENTIONER ASSY.
YAMAHA	YSM20	KLW-M9205-A0	PULLEY ASSY.
YAMAHA	YSM20	KLW-M920C-00	PLATE,PU BASE
YAMAHA	YSM20	KLW-M9213-00	BALL SCREW PU
YAMAHA	YSM20	KLW-M921E-00	BELT 852-3GT-15
YAMAHA	YSM20	95302-04600	NUT HEXAGON
YAMAHA	YSM20	99009-12400	CIRCLIP
YAMAHA	YSM20	\$UEF4BU-M3	JOINT
YAMAHA	YSM20	KHW-M916C-00	SPACER
YAMAHA	YSM20	KHY-M926H-00	JOINT, CYL.
YAMAHA	YSM20	KKE-M9163-01	BRKT.,STOPPER
YAMAHA	YSM20	KKE-M9164-01	BRKT.,STOPPER
YAMAHA	YSM20	KKE-M9164-10	BRKT.,STOPPER
YAMAHA	YSM20	KKE-M9165-02	PLATE,STOPPER
YAMAHA	YSM20	KKE-M9169-01	SHAFT,STOPPER
YAMAHA	YSM20	KLT-M9168-00	PLATE,STOPPER
YAMAHA	YSM20	KLW-M654C-11	CYL.RL CV2 ST1 ASSY
YAMAHA	YSM20	KLW-M654C-21	CYL.RL CV3 ST1 ASSY
YAMAHA	YSM20	KLW-M654C-31	CYL.RL CV3 ST2 ASSY
YAMAHA	YSM20	KLW-M654C-61	CYL.LR CV3 ST1 ASSY
YAMAHA	YSM20	KLW-M654C-41	CYL.LR CV2 ST1 ASSY
YAMAHA	YSM20	KLW-M654C-51	CYL.LR CV2 ST2 ASSY
YAMAHA	YSM20	KLW-M9161-00	BRKT.,CYLINDER
YAMAHA	YSM20	KLW-M9162-00	BRKT.,CYLINDER
YAMAHA	YSM20	KLW-M9167-00	PLATE,STOPPER
YAMAHA	YSM20	KLW-M916D-00	BRKT.,CYLINDER
YAMAHA	YSM20	KLW-M916E-00	BRKT.,CYLINDER
YAMAHA	YSM20	KLW-M9261-00	GUIDE
YAMAHA	YSM20	KLW-M9160-A0	STOPPER ASSY.1
YAMAHA	YSM20	KLW-M9160-B0	STOPPER ASSY.2-1
YAMAHA	YSM20	KLW-M9160-C0	STOPPER ASSY.2-2
YAMAHA	YSM20	KLW-M9160-D0	STOPPER ASSY.1
YAMAHA	YSM20	KLW-M9160-E0	STOPPER ASSY.2-1
YAMAHA	YSM20	KLW-M9160-F0	STOPPER ASSY.2-2
YAMAHA	YSM20	KHW-M9272-00	STOPPER,EXIT
YAMAHA	YSM20	KHW-M9274-A0	SPEED CONTROLLER
YAMAHA	YSM20	KHY-M9284-00	PLATE,STOPPER
YAMAHA	YSM20	KLW-M653N-00	CYL.RL CV4 ST ASSY
YAMAHA	YSM20	KLW-M653N-10	CYL.LR CV1 ST ASSY
YAMAHA	YSM20	KLW-M654C-00	CYL.RL CV1 ST ASSY
YAMAHA	YSM20	KLW-M654C-70	CYL.LR CV4 ST ASSY

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M9271-00	BRKT.,CYLINDER
YAMAHA	YSM20	KLW-M9270-A0	EXIT STOPPER ASSY.
YAMAHA	YSM20	KLW-M9270-B0	EXIT STOPPER ASSY.
YAMAHA	YSM20	KLW-M9280-A0	SUB STOPPER ASSY.
YAMAHA	YSM20	KLW-M9280-B0	SUB STOPPER ASSY.
YAMAHA	YSM20	\$SL4-M5	JOINT
YAMAHA	YSM20	90169-02JB04	SCREW, BINDING HEAD
YAMAHA	YSM20	90563-04J170	SPACER
YAMAHA	YSM20	KHW-M9167-00	BRKT.,CYL.
YAMAHA	YSM20	KHW-M9261-01	PLATE1,LINK
YAMAHA	YSM20	KHW-M9264-A0	LINK A ASSY.
YAMAHA	YSM20	KHW-M9265-00	SPACER
YAMAHA	YSM20	KHW-M926A-00	COLLAR
YAMAHA	YSM20	KHW-M926B-00	COLLAR, JOINT
YAMAHA	YSM20	KHW-M926E-00	NUT
YAMAHA	YSM20	KHY-M926F-00	JOINT , CYL. BRKT
YAMAHA	YSM20	KHY-M926M-00	STOPPER, CYLINDER
YAMAHA	YSM20	KKE-M9269-00	BRKT.,CYL.
YAMAHA	YSM20	KKE-M926F-00	COLLAR,FLOATING
YAMAHA	YSM20	KLT-M9263-00	CYLINDER
YAMAHA	YSM20	KLW-M9262-00	PLATE,BASE S
YAMAHA	YSM20	KLW-M926D-00	PLATE,BOARD CLAMP
YAMAHA	YSM20	KLW-M926G-00	PLATE 2,LINK
YAMAHA	YSM20	KLW-M926J-00	PLATE 1
YAMAHA	YSM20	KV7-M9266-01	GUIDE
YAMAHA	YSM20	95302-06600	NUT HEXAGON
YAMAHA	YSM20	KHW-M9264-B0	LINK B ASSY.
YAMAHA	YSM20	KLW-M9260-A0	CP BOARD SUB ASSY.
YAMAHA	YSM20	KLW-M9260-B0	CP BOARD SUB ASSY.
YAMAHA	YSM20	90990-41J006	COLLAR
YAMAHA	YSM20	90KC1-011203	AC SERVO MOTOR
YAMAHA	YSM20	KH2-M9121-00	BEARING
YAMAHA	YSM20	KKE-M918N-00	BRACKET 1,COLLAR
YAMAHA	YSM20	KKE-M918Y-00	SHAFT
YAMAHA	YSM20	KLF-M9135-01	PLATE,EDGE 2
YAMAHA	YSM20	KLF-M9150-A0	PULLEY,CONV. ASSY
YAMAHA	YSM20	KLW-M9110-00	BELT,CONVEYOR
YAMAHA	YSM20	KLW-M911E-A0	SPLINE PULLEY ASSY.
YAMAHA	YSM20	KLW-M913A-A0	PULLEY ASSY.
YAMAHA	YSM20	KLW-M914U-00	COVER,HNS.
YAMAHA	YSM20	KLW-M915J-00	STAY
YAMAHA	YSM20	KLW-M915K-00	PLATE
YAMAHA	YSM20	KLW-M915M-00	BELT 255-3GT-9
YAMAHA	YSM20	KLW-M915N-00	PLATE
YAMAHA	YSM20	KLW-M915R-00	PLATE
YAMAHA	YSM20	KLW-M918R-01	STAY,SPLINE
YAMAHA	YSM20	KLW-M918X-00	SPLINE 1
YAMAHA	YSM20	KLW-M9196-00	BRKT.,CONV.MOTOR
YAMAHA	YSM20	KLW-M91P5-00	PULLEY:P50-3GT

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M91P6-00	PULLEY:P25-3GT
YAMAHA	YSM20	KLW-M91P7-00	PLATE,CONV. MOTOR
YAMAHA	YSM20	KV7-M9140-A0	PULLEY CONV. ASSY
YAMAHA	YSM20	92012-04010	BOLT, BOTTON HEAD
YAMAHA	YSM20	92A08-04303	SCREW SET
YAMAHA	YSM20	98702-03005	SCREW,FLAT HEAD
YAMAHA	YSM20	KLW-M91M5-A0	CV MOTOR SUB ASSY.1
YAMAHA	YSM20	KLW-M91M7-A0	BRG.SUB ASSY.1
YAMAHA	YSM20	90990-25J024	BEARING
YAMAHA	YSM20	KHY-M9152-00	SPACER
YAMAHA	YSM20	KKE-M9143-A0	PULLEY ASSY.
YAMAHA	YSM20	KKE-M9185-00	PLATE 1,GUIDE
YAMAHA	YSM20	KKE-M9184-00	HOLDER A,BRG.
YAMAHA	YSM20	KKE-M9184-10	HOLDER B,BRG.
YAMAHA	YSM20	KKE-M9186-00	PLATE 2,GUIDE
YAMAHA	YSM20	KKE-M9187-00	PLATE 3,GUIDE
YAMAHA	YSM20	KKE-M9188-00	PLATE
YAMAHA	YSM20	KKE-M9189-00	HOLDER 2,NUT
YAMAHA	YSM20	KKE-M918B-00	HOLDER 1,NUT
YAMAHA	YSM20	KKE-M918C-00	PLATE 1,BRG.
YAMAHA	YSM20	KKE-M918E-00	PULLEY:P50-3GT
YAMAHA	YSM20	KKE-M918F-00	SPACER
YAMAHA	YSM20	KKE-M919C-00	COLLAR 2,BRG.
YAMAHA	YSM20	KKE-M919V-00	DAMPER B
YAMAHA	YSM20	KLW-M9141-00	PLATE,BASE
YAMAHA	YSM20	KLW-M9143-00	PLATE,BASE
YAMAHA	YSM20	KLW-M9145-00	PLATE
YAMAHA	YSM20	KLW-M9146-00	PLATE
YAMAHA	YSM20	KLW-M9147-00	PLATE
YAMAHA	YSM20	KLW-M9180-00	LM GUIDE
YAMAHA	YSM20	KLW-M918D-00	PLATE,PULLEY
YAMAHA	YSM20	KLW-M919T-00	BELT 1851-3GT-9
YAMAHA	YSM20	90933-01J807	BEARING
YAMAHA	YSM20	90933-02J608	BEARING
YAMAHA	YSM20	92012-05030	BOLT BUTTON HEAD
YAMAHA	YSM20	KLW-M91B1-A0	CV.BASE ASSY.1
YAMAHA	YSM20	KLW-M91UA-A0	HOLDER SUB ASSY.UA
YAMAHA	YSM20	KLW-M91U2-A0	HOLDER SUB ASSY.U2
YAMAHA	YSM20	KLW-M91W1-A0	HOLDER SUB ASSY.W1
YAMAHA	YSM20	KLW-M91W2-A0	HOLDER SUB ASSY.W2
YAMAHA	YSM20	KLW-M91W3-A0	BRG.SUB ASSY.
YAMAHA	YSM20	90933-01J000	BEARING
YAMAHA	YSM20	90990-28J018	WASHER,PLAIN
YAMAHA	YSM20	90K65-312350	AC SERVO MOTOR
YAMAHA	YSM20	KG2-M2604-00	SUPPORT UNIT
YAMAHA	YSM20	KKE-M9181-00	HOLDER 1,BRG.
YAMAHA	YSM20	KKE-M9182-00	HOLDER 2,BRG.
YAMAHA	YSM20	KKE-M9183-00	STAY 1
YAMAHA	YSM20	KKE-M918A-00	PLATE,NUT

YAMAHA Sparepart list

YAMAHA	YSM20	KKE-M918G-00	SLEEVE
YAMAHA	YSM20	KKE-M918P-10	BRACKET,DOG
YAMAHA	YSM20	KKE-M9197-A0	PULLEY ASSY.
YAMAHA	YSM20	KKE-M9198-00	PULLEY:P30-3GT
YAMAHA	YSM20	KKE-M919K-00	PLATE,DOG
YAMAHA	YSM20	KLW-M653C-00	SENSOR,UA ORG ASSY
YAMAHA	YSM20	KLW-M915L-00	COVER,PULLEY
YAMAHA	YSM20	KLW-M918J-00	STAY,U MOTOR
YAMAHA	YSM20	KLW-M918L-00	PLATE,TENSIONER
YAMAHA	YSM20	KLW-M9199-00	BELT 783-3GT-9
YAMAHA	YSM20	KLW-M919A-00	BALL SCREW
YAMAHA	YSM20	KLW-M919J-00	PLATE,SENSOR
YAMAHA	YSM20	KLW-M919W-00	DAMPER
YAMAHA	YSM20	91312-06100	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	92A08-06306	SCREW SET
YAMAHA	YSM20	99009-10400	CIRCLIP
YAMAHA	YSM20	KLW-M91U3-A0	HOLDER SUB ASSY.
YAMAHA	YSM20	KLW-M91U4-A0	HOLDER SUB ASSY.
YAMAHA	YSM20	KLW-M91U6-A0	TENSIONER ASSY.
YAMAHA	YSM20	KLW-M91M1-A0	UA MOTOR SUB ASSY.
YAMAHA	YSM20	KLW-M914L-00	PLATE,PIN GUARD
YAMAHA	YSM20	KLW-M914M-00	PLATE,PIN GUARD
YAMAHA	YSM20	90990-01J064	BOLT HEX.SOCKET HEAD
YAMAHA	YSM20	KLW-M653P-30	SENSOR DS CV4 ASSY(Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-60	SENSOR DS CV7 ASSY(Fiber+Amp)
YAMAHA	YSM20	KLC-M9203-00	LINEAR BUSHING
YAMAHA	YSM20	KLW-M653K-00	SEN.CV2 F PUSH1 ASSY
YAMAHA	YSM20	KLW-M653K-10	SEN.CV2 F PUSH2 ASSY
YAMAHA	YSM20	KLW-M653K-20	SEN.CV2 R PUSH1 ASSY
YAMAHA	YSM20	KLW-M653K-30	SEN.CV2 R PUSH2 ASSY
YAMAHA	YSM20	KLW-M9148-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9149-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M914G-00	PIN
YAMAHA	YSM20	KLW-M914K-00	SPRING
YAMAHA	YSM20	KLW-M914N-00	STAY,SENSOR
YAMAHA	YSM20	KLW-M914R-00	COVER,CABLE
YAMAHA	YSM20	KLW-M9151-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M915E-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M9191-00	FRAME,CONVEYOR
YAMAHA	YSM20	KLW-M9192-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9193-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9194-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M919B-00	GUIDE B
YAMAHA	YSM20	KLW-M919H-00	GUIDE C
YAMAHA	YSM20	KLW-M919L-00	STAY,PULLEY
YAMAHA	YSM20	KLW-M919N-00	STAY,SENSOR
YAMAHA	YSM20	95302-03700	NUT HEXAGON
YAMAHA	YSM20	90KC1-011B07	AC SERVO MOTOR
YAMAHA	YSM20	92012-05010	BOLT BUTTON HEAD

YAMAHA Sparepart list

YAMAHA	YSM20	92012-06012	BOLT BUTTON HEAD
YAMAHA	YSM20	KKE-M918S-01	COVER,DUCT
YAMAHA	YSM20	KKE-M919E-11	BRKT.1,DUCT
YAMAHA	YSM20	KKE-M919G-11	BRKT.2,DUCT
YAMAHA	YSM20	KLW-M914B-00	TAPE,U2 DUCT 1
YAMAHA	YSM20	KLW-M914C-00	TAPE,U2 DUCT 2
YAMAHA	YSM20	KLW-M914D-00	TAPE,W2 DUCT 1
YAMAHA	YSM20	KLW-M914E-00	TAPE,W2 DUCT 1
YAMAHA	YSM20	KLW-M914F-00	PLATE
YAMAHA	YSM20	KLW-M914S-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M914T-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M918T-00	BRKT.,W MOTOR
YAMAHA	YSM20	KLW-M918U-00	DUCT,CABLE
YAMAHA	YSM20	KLW-M919F-00	DUCT,CABLE
YAMAHA	YSM20	KLW-M91U8-A0	DUCT SUB ASSY.
YAMAHA	YSM20	KLW-M91M3-A0	W MOTOR SUB ASSY.1
YAMAHA	YSM20	90990-28J070	WASHER,PLAIN
YAMAHA	YSM20	90990-28J110	WASHER,PLAIN
YAMAHA	YSM20	90KC1-011402	AC SERVO MOTOR
YAMAHA	YSM20	91312-03014	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KHW-M9137-00	COLLAR,BRG.
YAMAHA	YSM20	KLW-M653P-20	SENSOR DS CV3 ASSY
YAMAHA	YSM20	KLV-M917S-00	GUIDE
YAMAHA	YSM20	KLV-M917T-00	GUIDE
YAMAHA	YSM20	KLW-M911F-A0	SPLINE PULLEY ASSY.
YAMAHA	YSM20	KLW-M915U-00	BRKT.,TENSIONER
YAMAHA	YSM20	KLW-M915V-00	BRKT.,TENSIONER
YAMAHA	YSM20	KLW-M9177-00	FRAME,CONVEYOR
YAMAHA	YSM20	KLW-M9178-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9179-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M917B-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M917E-00	STAY,PULLEY
YAMAHA	YSM20	KLW-M917F-00	STAY,SENSOR
YAMAHA	YSM20	KLW-M917H-00	BELT,CONVEYOR
YAMAHA	YSM20	KLW-M917K-00	SPLINE 1
YAMAHA	YSM20	KLW-M917L-00	BELT 297-3GT-9
YAMAHA	YSM20	KLW-M917U-00	PULLEY 1,MOTOR
YAMAHA	YSM20	KLW-M91FE-A0	FRAME ASSY.E
YAMAHA	YSM20	KLW-M91FF-A0	FRAME ASSY.F
YAMAHA	YSM20	KLW-M91FL-A0	FRAME ASSY.L
YAMAHA	YSM20	90990-28J058	WASHER,PLAIN
YAMAHA	YSM20	90KC1-011306	AC SERVO MOTOR
YAMAHA	YSM20	KG7-M9111-01	PULLEY 1
YAMAHA	YSM20	KLW-M9155-00	PLATE
YAMAHA	YSM20	KLW-M9157-00	BRKT.,SENSOR
YAMAHA	YSM20	KLW-M9175-00	STAY,CONVEYOR
YAMAHA	YSM20	KLW-M9176-00	STAY,CONVEYOR
YAMAHA	YSM20	KLW-M917D-A0	BRG.ASSY.
YAMAHA	YSM20	KLW-M917J-00	BELT 417-3GT-9

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M917V-00	BALL SCREW
YAMAHA	YSM20	KLW-M917W-00	BRKT.,SENSOR
YAMAHA	YSM20	KLW-M91M9-A0	CV MOTOR SUB ASSY.3
YAMAHA	YSM20	KLW-M91MA-A0	W MOTOR SUB ASSY.3
YAMAHA	YSM20	\$TSH6-01	JOINT
YAMAHA	YSM20	KLC-M910N-00	SPACER
YAMAHA	YSM20	KLF-M915B-00	SPACER
YAMAHA	YSM20	KLW-M9156-00	PLATE,STOPPER
YAMAHA	YSM20	KLW-M915G-00	DUCT,CABLE
YAMAHA	YSM20	KLW-M9174-00	PLATE
YAMAHA	YSM20	KLW-M917G-00	STAY,DUCT
YAMAHA	YSM20	KLW-M917M-00	DAMPER
YAMAHA	YSM20	KLW-M917N-00	DAMPER
YAMAHA	YSM20	KLW-M917R-00	BRKT.,DUCT
YAMAHA	YSM20	KLW-M917Y-00	PLATE,VALVE
YAMAHA	YSM20	KLW-M91B3-A0	CONV.BASE SUB ASSY.3
YAMAHA	YSM20	KLW-M91G1-A0	STOPPER SUB ASSY.1
YAMAHA	YSM20	KLW-M91G2-A0	STOPPER SUB ASSY.2
YAMAHA	YSM20	KLW-M91G6-A0	DUCT SUB ASSY.2
YAMAHA	YSM20	KLW-M91VA-A0	VALVE DS RL-R ASSY
YAMAHA	YSM20	KLW-M91VB-B0	VALVE DS LR-R ASSY
YAMAHA	YSM20	91312-05040	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	90KC1-011704	AC SERVO MOTOR
YAMAHA	YSM20	KLW-M653P-A0	SENSOR DS CV11 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-70	SENSOR DS CV8 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M918W-00	STAY,MOTOR
YAMAHA	YSM20	KLW-M9197-01	STAY,SPLINE
YAMAHA	YSM20	KLW-M919M-00	COVER,HNS.
YAMAHA	YSM20	KLW-M91M6-A0	CV MOTOR SUB ASSY.2
YAMAHA	YSM20	KHY-M9154-00	SPACER
YAMAHA	YSM20	KKE-M919U-00	DAMPER A
YAMAHA	YSM20	KLW-M9142-00	PLATE,BASE
YAMAHA	YSM20	KLW-M9144-00	PLATE,BASE
YAMAHA	YSM20	KLW-M919Y-00	PLATE,AMP
YAMAHA	YSM20	KLW-M91B2-A0	CV.BASE ASSY.2
YAMAHA	YSM20	KLW-M91U1-A0	HOLDER SUB ASSY.U1
YAMAHA	YSM20	KLW-M91W4-A0	BRG.SUB ASSY.
YAMAHA	YSM20	90K65-312851	AC SERVO MOTOR
YAMAHA	YSM20	KKE-M918P-00	BRACKET,DOG
YAMAHA	YSM20	KLW-M653C-10	SENSOR,UB ORG ASSY
YAMAHA	YSM20	KLW-M915W-00	DAMPER
YAMAHA	YSM20	KLW-M653K-40	SEN.CV3 F PUSH1 ASSY
YAMAHA	YSM20	KLW-M653K-50	SEN.CV3 F PUSH2 ASSY
YAMAHA	YSM20	KLW-M653K-60	SEN.CV3 R PUSH1 ASSY
YAMAHA	YSM20	KLW-M653K-70	SEN.CV3 R PUSH2 ASSY
YAMAHA	YSM20	KLW-M9150-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M915D-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M918M-00	COVER,CABLE
YAMAHA	YSM20	KLW-M91FC-A0	FRAME ASSY.C

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M91FD-A0	FRAME ASSY.D
YAMAHA	YSM20	KLW-M91FK-A0	FRAME ASSY.K
YAMAHA	YSM20	90KC1-011B13	AC SERVO MOTOR
YAMAHA	YSM20	KKE-M919E-01	BRKT.1,DUCT
YAMAHA	YSM20	KKE-M919G-01	BRKT.2,DUCT
YAMAHA	YSM20	KLW-M918V-00	BRKT.,W MOTOR
YAMAHA	YSM20	KLW-M919D-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M919S-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M91U9-A0	DUCT SUB ASSY.
YAMAHA	YSM20	KLW-M91M4-A0	W MOTOR SUB ASSY.2
YAMAHA	YSM20	90KC1-011305	AC SERVO MOTOR
YAMAHA	YSM20	KLW-M653P-B0	SENSOR DS CV12 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M917A-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M91FG-A0	FRAME ASSY.G
YAMAHA	YSM20	KLW-M91FH-A0	FRAME ASSY.H
YAMAHA	YSM20	KLW-M91FM-A0	FRAME ASSY.M
YAMAHA	YSM20	90KC1-011420	AC SERVO MOTOR
YAMAHA	YSM20	KLW-M91MB-A0	CV MOTOR SUB ASSY.4
YAMAHA	YSM20	KLW-M91MC-A0	W MOTOR SUB ASSY.4
YAMAHA	YSM20	KLW-M917P-00	BRKT.,DUCT
YAMAHA	YSM20	KLW-M91B4-A0	CONV.BASE SUB ASSY.4
YAMAHA	YSM20	KLW-M91VA-B0	VALVE DS LR-L ASSY
YAMAHA	YSM20	KLW-M91VB-A0	VALVE DS RL-L ASSY
YAMAHA	YSM20	KLW-M91G5-A0	DUCT SUB ASSY.1
YAMAHA	YSM20	KLF-M9156-01	HOLDER, SENSOR
YAMAHA	YSM20	KLW-M653H-00	SEN.L1 CV RIGHT ASSY
YAMAHA	YSM20	KLW-M653J-00	SEN.DS CV LEFT ASSY
YAMAHA	YSM20	KLW-M653P-00	SENSOR DS CV1 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-10	SENSOR DS CV2 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-40	SENSOR DS CV5 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-50	SENSOR DS CV6 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-80	SENSOR DS CV9 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-90	SENSOR DS CV10 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-C0	SENSOR DS CV13 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653P-D0	SENSOR DS CV14 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653U-401	SEN.L1 CV RIGHT ASSY
YAMAHA	YSM20	KLW-M653U-601	SEN.DS CV LEFT ASSY
YAMAHA	YSM20	KLW-M9521-00	FRAME,CONVEYOR
YAMAHA	YSM20	KLW-M9523-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9524-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9525-00	PLATE,JOINT
YAMAHA	YSM20	KLW-M9527-00	PLATE,HNS.
YAMAHA	YSM20	KLW-M957H-00	BELT,CONVEYOR
YAMAHA	YSM20	KHY-M921D-00	BELT 315-3GT-15
YAMAHA	YSM20	KLW-M653D-20	SENSOR,PUB ORG ASSY
YAMAHA	YSM20	KLW-M920D-00	PLATE,PU BASE
YAMAHA	YSM20	KLW-M920G-01	STAY
YAMAHA	YSM20	KLW-M920K-00	PLATE 1(400×425)
YAMAHA	YSM20	KLW-M921N-00	BELT 1170-3GT-15

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M9203-D0	STAY ASSY.
YAMAHA	YSM20	KLW-M9209-B0	SENSOR SUB ASSY.
YAMAHA	YSM20	KHY-M926S-A0	SPEED CONTROLLER
YAMAHA	YSM20	KKT-M9269-00	BRKT.,CYL.
YAMAHA	YSM20	KLW-M9266-00	PLATE 1,LINK
YAMAHA	YSM20	KLW-M9268-00	PLATE,BASE
YAMAHA	YSM20	KLW-M926U-00	PLATE 2,LINK
YAMAHA	YSM20	KLW-M926V-00	PLATE,BOARD CLAMP
YAMAHA	YSM20	KLW-M926W-00	PLATE,BOARD CLAMP
YAMAHA	YSM20	KLW-M926X-00	PLATE,BASE S
YAMAHA	YSM20	KLW-M926Y-00	PLATE 1
YAMAHA	YSM20	KLW-M9260-00	CP BOARD A SUB ASSY.
YAMAHA	YSM20	KLW-M9260-10	CP BOARD C SUB ASSY.
YAMAHA	YSM20	KLW-M9260-20	CP BOARD B SUB ASSY.
YAMAHA	YSM20	KLW-M9260-30	CP BOARD D SUB ASSY.
YAMAHA	YSM20	KG2-M9108-11	COLLAR CONVEYOR
YAMAHA	YSM20	KGT-M9135-00	PULLEY 1, SPLINE
YAMAHA	YSM20	KHY-M9157-00	SHAFT,MOTOR
YAMAHA	YSM20	KKE-M9118-00	BRACKET,COLLAR
YAMAHA	YSM20	KKE-M917J-00	PULLEY 1,MOTOR
YAMAHA	YSM20	KKT-M9114-00	BRKT.1,SPLINE
YAMAHA	YSM20	KLW-M9113-01	BELT,CONVEYOR
YAMAHA	YSM20	KLW-M912D-00	SPLINE 1
YAMAHA	YSM20	KLW-M912E-00	BRKT.,MOTOR
YAMAHA	YSM20	KLW-M912F-00	STAY,MOTOR
YAMAHA	YSM20	KLW-M9132-00	PLATE
YAMAHA	YSM20	KLW-M917Y-10	PLATE,VALVE
YAMAHA	YSM20	KLW-M91VC-A0	VALVE SL RL-R ASSY
YAMAHA	YSM20	KV1-M910A-00	BELT(246-3GT-9)
YAMAHA	YSM20	92A08-04305	SCREW SET
YAMAHA	YSM20	KLW-M91MF-A0	MOTOR SUB ASSY.
YAMAHA	YSM20	KLW-M91VC-B0	VALVE SL LR-R ASSY
YAMAHA	YSM20	90933-01J200	BEARING
YAMAHA	YSM20	KHW-M9139-00	PLATE,BRG.
YAMAHA	YSM20	KHY-M9151-00	DAMPER A
YAMAHA	YSM20	KKT-M9101-00	STAY
YAMAHA	YSM20	KKT-M9102-00	PLATE 1
YAMAHA	YSM20	KKT-M9103-00	PLATE A
YAMAHA	YSM20	KKT-M9105-00	PLATE 1A
YAMAHA	YSM20	KKT-M9105-10	PLATE 1A
YAMAHA	YSM20	KKT-M9106-00	PLATE ,GUIDE
YAMAHA	YSM20	KKT-M9106-10	PLATE ,GUIDE
YAMAHA	YSM20	KKT-M9138-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9109-00	BRKT.,MOTOR
YAMAHA	YSM20	KLW-M9116-00	LM GUIDE
YAMAHA	YSM20	KLW-M911G-00	BRKT.,STOPPER
YAMAHA	YSM20	KLW-M911R-00	PLATE,TENSIONER
YAMAHA	YSM20	KLW-M912B-00	BELT 2025-3GT-9
YAMAHA	YSM20	KLW-M9A00-00	BALL SCREW W

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M91H3-A0	STAND SUB ASSY.
YAMAHA	YSM20	KLW-M91H4-A0	STAND SUB ASSY.
YAMAHA	YSM20	KLW-M91MD-A0	MOTOR SUB ASSY.
YAMAHA	YSM20	KLW-M91G7-A0	TENSIONER ASSY.
YAMAHA	YSM20	KKE-M9131-00	PLATE,HNS.
YAMAHA	YSM20	KKT-M912A-00	BRKT.,SENSOR
YAMAHA	YSM20	KKT-M9147-00	GUIDE.HNS.
YAMAHA	YSM20	KKT-M9275-00	BRKT.,SENSOR
YAMAHA	YSM20	KLW-M9112-00	BRKT.,STOPPER
YAMAHA	YSM20	KLW-M911L-00	PLATE,PIN GUARD
YAMAHA	YSM20	KLW-M911M-00	PLATE,PIN GUARD
YAMAHA	YSM20	KLW-M911N-00	STAY,SENSOR
YAMAHA	YSM20	KLW-M911P-00	GUIDE,HNS.
YAMAHA	YSM20	KLW-M9121-00	FRAME,CONVEYOR
YAMAHA	YSM20	KLW-M9122-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9123-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9126-00	FRAME,CONVEYOR
YAMAHA	YSM20	KLW-M9127-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9128-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9129-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M9133-00	BRKT.,STOPPER
YAMAHA	YSM20	KLW-M9136-00	PLATE
YAMAHA	YSM20	KLW-M9137-00	DAMPER
YAMAHA	YSM20	KLW-M913B-00	PLATE
YAMAHA	YSM20	KLW-M913C-00	PLATE
YAMAHA	YSM20	KLW-M913D-00	PLATE
YAMAHA	YSM20	KLW-M913E-00	PLATE
YAMAHA	YSM20	92A08-03304	SCREW SET
YAMAHA	YSM20	KLW-M653J-10	SEN.L1 CV LEFT ASSY
YAMAHA	YSM20	KLW-M653L-00	SENSOR PUSH1-1 ASSY
YAMAHA	YSM20	KLW-M653L-10	SENSOR PUSH1-2 ASSY
YAMAHA	YSM20	KLW-M653L-20	SENSOR PUSH2-1 ASSY
YAMAHA	YSM20	KLW-M653L-30	SENSOR PUSH2-2 ASSY
YAMAHA	YSM20	KLW-M654A-00	SENSOR SL CV1 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M654A-10	SENSOR SL CV2 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M654A-30	SENSOR SL CV4 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M654A-40	SENSOR SL CV5 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M654A-50	SENSOR SL CV6 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M654A-60	SENSOR SL CV7 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M654A-70	SENSOR SL CV8 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M654A-80	SENSOR SL CV9 ASSY (Fiber+Amp)
YAMAHA	YSM20	KLW-M653U-40	SEN.L1 CV RIGHT ASSY
YAMAHA	YSM20	KLW-M653U-70	SEN.L1 CV LEFT ASSY
YAMAHA	YSM20	KLW-M920E-00	PLATE,PU BASE
YAMAHA	YSM20	KLW-M920H-00	STAY
YAMAHA	YSM20	KLW-M920L-00	PLATE 1(400×305)
YAMAHA	YSM20	KKE-M9B00-00	BALL SCREW PU
YAMAHA	YSM20	KLW-M921F-00	GUIDE,PIN
YAMAHA	YSM20	KLW-M921G-00	GUIDE,PIN

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M921L-00	BELT 1188-3GT-15
YAMAHA	YSM20	KLW-M9203-E0	STAY ASSY.
YAMAHA	YSM20	KLW-M9207-A0	SENSOR SUB ASSY.
YAMAHA	YSM20	KKV-M920D-00	PUSH UP PIN UNIT
YAMAHA	YSM20	90K65-332K74	AC SERVO MOTOR
YAMAHA	YSM20	KLW-M920F-00	PLATE,PU BASE
YAMAHA	YSM20	KLW-M920J-00	STAY
YAMAHA	YSM20	KLW-M920M-00	PLATE 1(400×152)
YAMAHA	YSM20	KLW-M921M-00	BELT 936-3GT-15
YAMAHA	YSM20	KLW-M9203-F0	STAY ASSY.
YAMAHA	YSM20	KLW-M9208-B0	MOTOR ASSY.
YAMAHA	YSM20	KLW-M9209-A0	SENSOR SUB ASSY.
YAMAHA	YSM20	KHW-M9282-00	STOPPER,SUB
YAMAHA	YSM20	KKT-M9161-00	BRKT.,CYLINDER
YAMAHA	YSM20	KKT-M9271-00	PLATE,STOPPER
YAMAHA	YSM20	KLW-M653M-00	CYL.RL L1CV ST1 ASSY
YAMAHA	YSM20	KLW-M653M-10	CYL.RL L1CV ST2 ASSY
YAMAHA	YSM20	KLW-M653M-20	CYL.RL L1CV ST3 ASSY
YAMAHA	YSM20	KLW-M653M-40	CYL.RL L1CV ST5 ASSY
YAMAHA	YSM20	KLW-M653M-50	CYL.RL L2CV ST1 ASSY
YAMAHA	YSM20	KLW-M653M-60	CYL.RL L2CV ST2 ASSY
YAMAHA	YSM20	KLW-M653M-70	CYL.RL L2CV ST3 ASSY
YAMAHA	YSM20	KLW-M653M-90	CYL.RL L2CV ST5 ASSY
YAMAHA	YSM20	KLW-M9160-00	MAIN STP.ASSY.1-1
YAMAHA	YSM20	KLW-M9160-40	MAIN STP.ASSY.2-1
YAMAHA	YSM20	KLW-M9270-00	EXIT STOPPER ASSY.1
YAMAHA	YSM20	KLW-M9270-20	EXIT STOPPER ASSY.2
YAMAHA	YSM20	KLW-M9280-00	SUB STP.ASSY.1-1
YAMAHA	YSM20	KLW-M9280-10	SUB STP.ASSY.1-2
YAMAHA	YSM20	KLW-M9280-40	SUB STP.ASSY.2-1
YAMAHA	YSM20	KLW-M9280-50	SUB STP.ASSY.2-2
YAMAHA	YSM20	KLW-M653M-A0	CYL.LR L1CV ST1 ASSY
YAMAHA	YSM20	KLW-M653M-C0	CYL.LR L1CV ST3 ASSY
YAMAHA	YSM20	KLW-M653M-D0	CYL.LR L1CV ST4 ASSY
YAMAHA	YSM20	KLW-M653M-E0	CYL.LR L1CV ST5 ASSY
YAMAHA	YSM20	KLW-M653M-F0	CYL.LR L2CV ST1 ASSY
YAMAHA	YSM20	KLW-M653M-H0	CYL.LR L2CV ST3 ASSY
YAMAHA	YSM20	KLW-M653M-J0	CYL.LR L2CV ST4 ASSY
YAMAHA	YSM20	KLW-M653M-K0	CYL.LR L2CV ST5 ASSY
YAMAHA	YSM20	KLW-M9160-20	MAIN STP.ASSY.1-1
YAMAHA	YSM20	KLW-M9160-60	MAIN STP.ASSY.2-1
YAMAHA	YSM20	KLW-M9270-10	EXIT STOPPER ASSY.1
YAMAHA	YSM20	KLW-M9270-30	EXIT STOPPER ASSY.2
YAMAHA	YSM20	KLW-M9280-20	SUB STP.ASSY.1-1
YAMAHA	YSM20	KLW-M9280-30	SUB STP.ASSY.1-2
YAMAHA	YSM20	KLW-M9280-60	SUB STP.ASSY.2-1
YAMAHA	YSM20	KLW-M9280-70	SUB STP.ASSY.2-2
YAMAHA	YSM20	KGT-M915U-00	PULLEY DRIVE, F
YAMAHA	YSM20	KKV-M9115-00	BRKT.1,SPLINE

YAMAHA Sparepart list

YAMAHA	YSM20	KKV-M9119-00	SHAFT
YAMAHA	YSM20	KLW-M9111-00	STAY, CV.MOTOR
YAMAHA	YSM20	KLW-M9117-00	SPLINE 1
YAMAHA	YSM20	KLW-M91VC-C0	VALVE DL RL-L ASSY
YAMAHA	YSM20	KLW-M91VC-D0	VALVE DL LR-L ASSY
YAMAHA	YSM20	KKV-M9152-00	PLATE 1
YAMAHA	YSM20	KLW-M9118-00	BRKT., MOTOR
YAMAHA	YSM20	KLW-M912C-00	BELT 2100-3GT-9
YAMAHA	YSM20	KLW-M9A00-10	BALL SCREW W
YAMAHA	YSM20	KLW-M9A00-20	BALL SCREW W
YAMAHA	YSM20	KLW-M91ME-A0	MOTOR SUB ASSY.
YAMAHA	YSM20	KLW-M91G8-A0	TENSIONER ASSY.
YAMAHA	YSM20	KKV-M9104-00	PLATE 1A
YAMAHA	YSM20	KKV-M9104-10	PLATE 1A
YAMAHA	YSM20	KKV-M9107-00	STAY
YAMAHA	YSM20	KKV-M9108-00	PLATE 2
YAMAHA	YSM20	KKV-M9151-00	DAMPER A
YAMAHA	YSM20	KKV-M9153-00	PLATE 2
YAMAHA	YSM20	KLW-M9116-10	LM GUIDE
YAMAHA	YSM20	KLW-M9139-00	PLATE, GUIDE
YAMAHA	YSM20	KLW-M9154-00	ADJUST BOLT
YAMAHA	YSM20		
YAMAHA	YSM20	KKT-M912A-10	BRKT., SENSOR
YAMAHA	YSM20	KKT-M9275-10	BRKT., SENSOR
YAMAHA	YSM20	KLW-M913C-10	PLATE
YAMAHA	YSM20	KLW-M913D-10	PLATE
YAMAHA	YSM20	KLW-M913E-10	PLATE
YAMAHA	YSM20	90166-02JA04	SCREW, PAN HEAD
YAMAHA	YSM20	90990-32J006	BOLT, FLANGE
YAMAHA	YSM20	\$SC4-M3MA	SPEED CONTROLLER
YAMAHA	YSM20	KLW-M731D-00	COVER, MIRROR
YAMAHA	YSM20	KLW-M7512-00	COVER, GLASS
YAMAHA	YSM20	KLW-M7526-00	PLATE, GLASS
YAMAHA	YSM20	KLW-M73C0-00	MULTI CAM. ASSY.
YAMAHA	YSM20	KLW-M73C0-10	MULTI+CO CAM. ASSY.
YAMAHA	YSM20	KLW-M73F0-00	MULTI CAM. ASSY. FM
YAMAHA	YSM20	KLW-M73F0-10	MULTI+CO CAM. ASSY. FM
YAMAHA	YSM20	\$PF	PLUG
YAMAHA	YSM20	\$TL6-02	JOINT
YAMAHA	YSM20	\$TL6-01	JOINT
YAMAHA	YSM20	\$TS6-01M	JOINT
YAMAHA	YSM20	\$US6	JOINT
YAMAHA	YSM20	90169-02J206	SCREW, BINDING HEAD
YAMAHA	YSM20	90990-41J066	COLLAR
YAMAHA	YSM20	K40-M8598-10	PLUG 1
YAMAHA	YSM20	KLW-M99B6-00	PLUG
YAMAHA	YSM20	KGR-M9934-01	INLINE FILTER
YAMAHA	YSM20	KLW-M99B5-00	INLINE FILTER
YAMAHA	YSM20	KLW-M653X-00	SENSOR, BLOW ST. ASSY

YAMAHA Sparepart list

YAMAHA	YSM20	KLF-M9906-A0	VALVE ASSY.
YAMAHA	YSM20	KLW-M99V1-A0	BLOW VALVE ASSY.
YAMAHA	YSM20	KHY-M99D2-00	DIFFUSE PLATE
YAMAHA	YSM20	KKT-M9903-00	BLOCK,BLOW ST.
YAMAHA	YSM20	KLW-M99B1-00	BASE,BLOW ST.
YAMAHA	YSM20	KLW-M99B1-01	BASE,BLOW ST.
YAMAHA	YSM20	KLW-M99B2-00	PLATE,BASE
YAMAHA	YSM20	KLW-M99B3-00	BOX,EXHAUST
YAMAHA	YSM20	KLW-M99D1-00	PLATE,DUMP
YAMAHA	YSM20	KLW-M99D2-00	STAY,SENSOR
YAMAHA	YSM20	KLW-M99D3-00	DUMP BOX
YAMAHA	YSM20	KLW-M653W-00	SENSOR,DUMP BOX ASSY
YAMAHA	YSM20	\$KM-10	MUFFLER
YAMAHA	YSM20	\$TL4-01M	JOINT
YAMAHA	YSM20	\$TL6-01M	JOINT
YAMAHA	YSM20	92B12-10035	SCREW, HEX. SOCKET COUNTERSUNK HEAD CAP
YAMAHA	YSM20	KHY-M3T0C-00	CUTTER VALVE
YAMAHA	YSM20	KHY-M3T0L-01	CYL. COLLAR 3
YAMAHA	YSM20	KHY-M3T13-00	CYL. COLLAR 1
YAMAHA	YSM20	KHY-M3T14-02	CYL. COLLAR 2
YAMAHA	YSM20	KHY-M3T24-10	DAMPER STOPPER
YAMAHA	YSM20	KJJ-M3T05-10	CUTTER UPPER,384
YAMAHA	YSM20	KJJ-M3T07-B0	CUTTER LOWER,384
YAMAHA	YSM20	KLC-M11FA-00	BOLT,BUTTON HEAD
YAMAHA	YSM20	KLF-M3T34-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M3T01-01	BASE,CUTTER
YAMAHA	YSM20	KLW-M3T02-00	BASE,BLADE
YAMAHA	YSM20	KLW-M3T03-00	PLATE,SIDE
YAMAHA	YSM20	KLW-M3T04-00	STAY,DUCT
YAMAHA	YSM20	KLW-M3T06-00	BLOCK,CYL.
YAMAHA	YSM20	KLW-M3T08-00	COVER,CUTTER UPR.
YAMAHA	YSM20	KLW-M3T0A-00	GUIDE,CUTTER
YAMAHA	YSM20	KLW-M3T0B-00	STAY,CYL.
YAMAHA	YSM20	KLW-M3T0C-00	BLOCK,ABSORBER
YAMAHA	YSM20	KLW-M3T0D-00	SHOCK ABSORBER
YAMAHA	YSM20	KLW-M3T0F-00	BRKT.,HOSE
YAMAHA	YSM20	KLW-M3T0N-00	PLATE,CUTTER BASE 2
YAMAHA	YSM20	KLW-M3T0N-A0	PLATE 32 ASSY.
YAMAHA	YSM20	KLW-M3T0P-01	BRKT.,VALVE
YAMAHA	YSM20	KLW-M654F-00	CYL.TAPE CUTTER ASSY
YAMAHA	YSM20	91312-06090	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M3T0B-10	STAY,CYL.
YAMAHA	YSM20	KLW-M3T0G-00	BRKT.,COUPLER
YAMAHA	YSM20	KLW-M3T0J-00	COUPLER,PLUG
YAMAHA	YSM20	KLW-M3T0L-00	PLATE,BAFFLE
YAMAHA	YSM20	KLW-M654F-10	CYL.TAPE CUTTER ASSY
YAMAHA	YSM20	KLW-M3T0K-00	CUTTER VALVE ASSY.
YAMAHA	YSM20	KLW-M3T0N-01	BLOCK
YAMAHA	YSM20	KLW-M3T0S-00	PLATE,SUS

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M3T0T-00	BRKT.,CLAMP
YAMAHA	YSM20	\$UK6	JOINT
YAMAHA	YSM20	KLW-M3T20-00	COVER UPR. 32 ASSY.
YAMAHA	YSM20	KLW-M3T20-10	COVER UPR. 32 ASSY.
YAMAHA	YSM20	KLW-M3T2B-00	DUCT,CUTTER L
YAMAHA	YSM20	KLW-M3T2C-00	DUCT,CUTTER R
YAMAHA	YSM20	KLW-M3T2D-00	STAY,DUCT
YAMAHA	YSM20	KLW-M3T2E-00	COVER,BASE 32A
YAMAHA	YSM20	KLW-M3T2F-00	COVER,BASE 32B
YAMAHA	YSM20	90K41-001260	LABEL,WARNING
YAMAHA	YSM20	90K41-001410	LABEL,WARNING
YAMAHA	YSM20	KGS-M1360-00	BOLT
YAMAHA	YSM20	KJJ-M11C2-22	DUCT 2
YAMAHA	YSM20	KJJ-M5127-00	SAFETY SWITCH KEY
YAMAHA	YSM20	KLW-M11C6-00	COVER,SAFETY L
YAMAHA	YSM20	KLW-M11C7-00	COVER,SAFETY R
YAMAHA	YSM20	KLW-M11C8-00	BRKT.,COVER SAFETY L
YAMAHA	YSM20	KLW-M11C9-01	BRKT.,COVER SAFETY R
YAMAHA	YSM20	KLW-M11CA-00	PLATE,COVER SAFETY
YAMAHA	YSM20	KLW-M1324-00	COVER,FRONT
YAMAHA	YSM20	KLW-M1325-00	BRKT.,SWITCH
YAMAHA	YSM20	KLW-M5126-C0	SAFETY SW UNIT ASSY
YAMAHA	YSM20	91312-08070	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KLW-M3T55-A0	CUTTER,UPPER 70
YAMAHA	YSM20	KLW-M3T57-A0	CUTTER,LOWER 70
YAMAHA	YSM20	KLW-M3T59-01	BASE,BLADE
YAMAHA	YSM20	KLW-M3T5A-00	BRACKET,STAND L
YAMAHA	YSM20	KLW-M3T5B-00	BRACKET,STAND R
YAMAHA	YSM20	KLW-M3T5C-00	COVER,CUTTER
YAMAHA	YSM20	KLW-M3T5D-00	COVER,CUTTER L
YAMAHA	YSM20	KLW-M3T5E-00	COVER,CUTTER R
YAMAHA	YSM20	KLW-M3T5G-00	BLOCK,CYL.
YAMAHA	YSM20	KLW-M3T5J-00	BRACKET,COVER
YAMAHA	YSM20	KLW-M3T5K-00	PLATE,COVER
YAMAHA	YSM20	KLW-M3T5M-00	BRACKET,COVER UPR.
YAMAHA	YSM20	KLW-M3T5N-00	BRACKET,COVER LWR.
YAMAHA	YSM20	KLW-M3T5P-00	PLATE,CUTTER COVER
YAMAHA	YSM20	KLW-M3T5R-00	BRACKET,VALVE
YAMAHA	YSM20	KLW-M3T0N-B0	PLATE 70 ASSY.
YAMAHA	YSM20	KLW-M3T5V-00	BRACKET,AIR HOSE
YAMAHA	YSM20	99480-03012	PIN,PARALLEL
YAMAHA	YSM20	KLF-M3T0V-00	CUTTER VALVE ASSY
YAMAHA	YSM20	KLW-M3TBB-00	CUTTER BASE ASSY.
YAMAHA	YSM20	90990-28J119	WASHER,PLAIN
YAMAHA	YSM20	KLW-M3T0M-00	BLOCK,BASE
YAMAHA	YSM20	KLW-M654F-50	CYL.TAPE CUTTER ASSY
YAMAHA	YSM20	KLW-M3T51-00	BASE PLATE
YAMAHA	YSM20	KLW-M3T52-00	BASE PLATE,FRONT
YAMAHA	YSM20	KLW-M3T53-00	SIDE BLOCK,L

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M3T54-00	SIDE BLOCK,R
YAMAHA	YSM20	KLW-M3T5F-00	STAY,CYL.
YAMAHA	YSM20	KLW-M3T5L-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M3T5S-00	PLATE,GUIDE
YAMAHA	YSM20	KLW-M3T5T-00	PLATE,SIDE COVER
YAMAHA	YSM20	KJJ-M13AB-A0	HOLDER ASSY
YAMAHA	YSM20	KLW-M11C2-00	DUCT 70
YAMAHA	YSM20	KLW-M11C6-50	COVER,SAFETY 70
YAMAHA	YSM20	KLW-M3T61-00	COVER UPR.70R ASSY.
YAMAHA	YSM20	KLW-M3T65-00	COVER,UPR.70F
YAMAHA	YSM20	KLW-M3T66-00	FIX,STAY L
YAMAHA	YSM20	KLW-M3T67-00	FIX,STAY R
YAMAHA	YSM20	KLW-M3T68-00	BRACKET,UPR. L
YAMAHA	YSM20	KLW-M3T69-00	BRACKET,UPR. R
YAMAHA	YSM20	KLW-M3T6A-00	COVER,UPPER 70
YAMAHA	YSM20	KLW-M3T6B-00	DUCT,CUTTER 70
YAMAHA	YSM20	KLW-M3T6C-00	STAY,DUCT 70F
YAMAHA	YSM20	KLW-M3T6D-00	STAY,DUCT 70R
YAMAHA	YSM20	98907-04008	SCREW BINDING HEAD
YAMAHA	YSM20	KLW-M3TB2-00	SLOPE 70 ASSY.
YAMAHA	YSM20	KLW-M3TB3-00	SAFETY COVER ASSY.
YAMAHA	YSM20	90990-42J052	JOINT
YAMAHA	YSM20	90990-42J053	JOINT
YAMAHA	YSM20	90990-65J003	SILENCER
YAMAHA	YSM20	90K81-200001	CAP C5
YAMAHA	YSM20	KMC-M3T01-01	BASE,CUTTER
YAMAHA	YSM20	KMC-M3T02-00	BASE,BLADE
YAMAHA	YSM20	KMC-M3T02-A0	BASE BLADE ASSY.
YAMAHA	YSM20	KMC-M3T03-00	PLATE,SIDE
YAMAHA	YSM20	KMC-M3T06-00	BLOCK,CYL.
YAMAHA	YSM20	KMC-M3T08-00	COVER,CUTTER UPR.
YAMAHA	YSM20	KMC-M3T0A-00	LM GUIDE
YAMAHA	YSM20	KMC-M3T0B-00	STAY,CYL.
YAMAHA	YSM20	KMC-M3T0K-00	CUT VALVE SUB ASSY.
YAMAHA	YSM20	KMC-M3T0N-00	BLOCK
YAMAHA	YSM20	KMC-M3T0N-A0	PLATE 32 ASSY.
YAMAHA	YSM20	KMC-M3T0P-00	BRKT.,VALVE
YAMAHA	YSM20	KMC-M3T0S-00	PLATE,SUS
YAMAHA	YSM20	KMC-M3T0T-00	BRKT.,CLAMP
YAMAHA	YSM20	KMC-M3T0U-00	PLATE,BAFFLE
YAMAHA	YSM20	KMC-M3T30-00	DAMPER STOPPER
YAMAHA	YSM20	KMC-M3TAA-00	CUTTER BASE 32 ASSY.
YAMAHA	YSM20	KMC-M3TV1-00	VALVE,CUTTER
YAMAHA	YSM20	KMC-M654F-00	CYL.TAPE CUTTER ASSY
YAMAHA	YSM20	KMC-M654F-10	CYL.TAPE CUTTER ASSY
YAMAHA	YSM20	91317-08095	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	91317-08120	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KMC-M3T20-00	COVER UPR.32 ASSY.
YAMAHA	YSM20	KMC-M3T20-10	COVER UPR.32 ASSY.

YAMAHA Sparepart list

YAMAHA	YSM20	KMC-M3T2B-00	DUCT,CUTTER L
YAMAHA	YSM20	KMC-M3T2C-00	DUCT,CUTTER R
YAMAHA	YSM20	KMC-M3T2D-00	STAY,DUCT
YAMAHA	YSM20	KMC-M3T2E-00	COVER,BASE 32A
YAMAHA	YSM20	KMC-M3T2F-01	COVER,BASE 32B
YAMAHA	YSM20	KMC-M11C2-00	DUCT 2
YAMAHA	YSM20	KMC-M11C6-00	COVER,SAFETY L
YAMAHA	YSM20	KMC-M11C7-00	COVER,SAFETY R
YAMAHA	YSM20	KMC-M3T0N-10	BLOCK
YAMAHA	YSM20	KMC-M3T0N-B0	PLATE 70 ASSY.
YAMAHA	YSM20	KMC-M3T0S-10	PLATE,SUS
YAMAHA	YSM20	KMC-M3T0T-10	BRKT.,CLAMP
YAMAHA	YSM20	KMC-M3T59-00	BASE,BLADE
YAMAHA	YSM20	KMC-M3T5A-00	PLATE,SIDE
YAMAHA	YSM20	KMC-M3T5D-00	STAY,DUCT
YAMAHA	YSM20	KMC-M3T5P-00	COVER,CUTTER UPR.
YAMAHA	YSM20	KMC-M3T5R-00	BRKT.,VALVE
YAMAHA	YSM20	KMC-M3TV1-A0	CUTTER VALVE ASSY
YAMAHA	YSM20	KMC-M3T0K-10	CUT VALVE SUB ASSY.
YAMAHA	YSM20	KLW-M654F-91	SEN.SPARE ASSY
YAMAHA	YSM20	KMC-M3T10-00	CYL.,TAPE CUTTER
YAMAHA	YSM20	KMC-M3T51-00	BASE,CUTTER
YAMAHA	YSM20	KMC-M3T5V-00	BRKT.,HOSE
YAMAHA	YSM20	KMC-M3T5W-00	STAY,COVER UPR.70
YAMAHA	YSM20	91312-08060	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	KMC-M3T62-00	COVER,UPR.70R
YAMAHA	YSM20	KMC-M3T65-00	COVER,UPR.70F
YAMAHA	YSM20	KMC-M3T6B-00	DUCT,CUTTER 70
YAMAHA	YSM20	\$AUK6	JOINT
YAMAHA	YSM20	KMC-M3TB2-00	SLOPE 70 ASSY.
YAMAHA	YSM20	90172-00J060	WASHER, EXTL, TOOTHED
YAMAHA	YSM20	90990-23J029	GROMMET
YAMAHA	YSM20	92012-06010	BOLT BUTTON HEAD
YAMAHA	YSM20	KHJ-M4484-02	FDR.ST.BOARD ASSY
YAMAHA	YSM20	KHJ-M4486-00	PITCH LED BOARD ASSY
YAMAHA	YSM20	KHJ-M663B-10	HNS, PITCH LED
YAMAHA	YSM20	KHJ-M663C-10	HNS,PITCH UP
YAMAHA	YSM20	KHJ-MD110-00	LABEL, PITCH
YAMAHA	YSM20	KHJ-MD115-00	PIN,HUNG R
YAMAHA	YSM20	KHJ-MD210-00	FOOT
YAMAHA	YSM20	KHY-M66RK-00	HNS,FDR.ST.
YAMAHA	YSM20	KLF-M669B-10	HNS,PITCH DOWN
YAMAHA	YSM20	KLF-M669B-20	HNS,PITCH SET
YAMAHA	YSM20	KLF-M66TE-10	HNS,F.CTRL – FDR.
YAMAHA	YSM20	KLF-MD101-00	FEEDER PLATE
YAMAHA	YSM20	KLF-MD104-00	CLAMP PLATE
YAMAHA	YSM20	KLF-MD105-00	FEEDER STOPPER
YAMAHA	YSM20	KLF-MD111-00	RAIL GUIDE 16P
YAMAHA	YSM20	KLF-MD112-00	PLATE, UNDER COVER

YAMAHA Sparepart list

YAMAHA	YSM20	KLF-MD121-00	REELHOLDER
YAMAHA	YSM20	KLF-MD122-00	PLATE,REELHOLDER
YAMAHA	YSM20	KLF-MD123-00	SHAFT
YAMAHA	YSM20	KLF-MD124-00	SHAFT,REELHOLDER
YAMAHA	YSM20	KLF-MD125-00	PLATE,REEL SET
YAMAHA	YSM20	KLF-MD126-00	BRKT,SHAFT
YAMAHA	YSM20	KLF-MD1C0-00	REELHOLDER EQUIP.
YAMAHA	YSM20	KLW-MD102-00	COVER,HNS
YAMAHA	YSM20	KLW-MD103-00	COVER,SIDE
YAMAHA	YSM20	KLW-MD106-00	PLATE,CONNECTOR
YAMAHA	YSM20	KLW-MD107-00	COVER,BACK
YAMAHA	YSM20	KLW-MD108-00	COVER,HNS.2
YAMAHA	YSM20	KLW-MD109-00	COVER,SWITCH
YAMAHA	YSM20	KLW-MD113-00	HUNGER
YAMAHA	YSM20	KHJ-MD201-00	FEEDER PLATE
YAMAHA	YSM20	KHJ-MD202-00	SIDE PLATE, L
YAMAHA	YSM20	KHJ-MD203-00	SIDE PLATE, R
YAMAHA	YSM20	KHJ-MD204-00	CLAMP PLATE
YAMAHA	YSM20	KHJ-MD205-00	FEEDER STOPPER
YAMAHA	YSM20	KHJ-MD206-00	CONNECTOR PLATE
YAMAHA	YSM20	KHJ-MD207-00	UNDER COVER
YAMAHA	YSM20	KHJ-MD208-00	BACK COVER
YAMAHA	YSM20	KHJ-MD209-00	BASE PLATE
YAMAHA	YSM20	KJJ-M371R-000	RAIL GUIDE 16P
YAMAHA	YSM20	KHJ-MD212-00	BKT. SWITCH
YAMAHA	YSM20	KHJ-MD213-00	REEL HOLDER, FIX.
YAMAHA	YSM20	KHJ-MD214-00	REEL HOLDER, MOVE
YAMAHA	YSM20	KJ3-M6511-00	CIRCUIT PROTECTOR, 1
YAMAHA	YSM20	KHJ-M537A-00	NOISE FILTER
YAMAHA	YSM20	KHJ-M6561-10	POWER SUPPLY 1
YAMAHA	YSM20	KHJ-M661B-01	HNS, AC IN 2
YAMAHA	YSM20	KHJ-M662A-00	HNS, CP DC24V
YAMAHA	YSM20	KHJ-M662B-00	HNS, LAMP
YAMAHA	YSM20	KHJ-M662C-000	HNS, BRD.PWR
YAMAHA	YSM20	KHJ-M663C-00	HNS, PITCH UP
YAMAHA	YSM20	KHJ-M663D-00	HNS, PITCH DOWN
YAMAHA	YSM20	KHJ-M663E-00	HNS, PITCH SET
YAMAHA	YSM20	KJ3-M662A-00	HNS, AC IN 1
YAMAHA	YSM20	KJ3-M661A-00	HNS, AC IN 1
YAMAHA	YSM20	KHJ-MD215-001	LABEL, SERIAL
YAMAHA	YSM20	KHA-M5184-11	SEAL, LABEL
YAMAHA	YSM20	90563-03J100	SPACER BOLT
YAMAHA	YSM20	KHJ-MK002-20	FEEDER-50 PLATE
YAMAHA	YSM20	KHJ-MK010-20	FRAME,REEL STAND 1
YAMAHA	YSM20	KHJ-MK011-20	GUIDE,PARTITION 2
YAMAHA	YSM20	KHJ-MK012-20	FRAME,REEL STAND 2
YAMAHA	YSM20	KHJ-MK013-20	MAIN FRAME 1
YAMAHA	YSM20	KHJ-MK014-20	MAIN FRAME 2
YAMAHA	YSM20	KHJ-MK015-20	MAIN FRAME 3

YAMAHA Sparepart list

YAMAHA	YSM20	KHJ-MK016-20	MAIN FRAME 4
YAMAHA	YSM20	KHJ-MK017-20	MAIN FRAME 5
YAMAHA	YSM20	KHJ-MK018-20	MAIN FRAME 6
YAMAHA	YSM20	KHJ-MK019-20	PULL
YAMAHA	YSM20	KHJ-MK020-20	PARTITION 2
YAMAHA	YSM20	KLW-M3600-A0	DUST BOX ASSY.
YAMAHA	YSM20	90166-12JA10	SCREW, PAN HEAD
YAMAHA	YSM20	KJJ-M412B-00	CLAMP 2
YAMAHA	YSM20	KKE-M4141-00	DUMMY PANEL SYS
YAMAHA	YSM20	KLA-M4209-70	SYSTEM UNIT ASSY
YAMAHA	YSM20	KLA-M441H-20	VISION BOARD ASSY
YAMAHA	YSM20	KLA-M4530-10	REMOTE IF BOARD ASSY
YAMAHA	YSM20	KLW-M4530-10	REMOTE IF BOARD ASSY
YAMAHA	YSM20	KLA-M5840-03	SERVO BOARD ASSY
YAMAHA	YSM20	KLA-M5840-33	SERVO BOARD ASSY
YAMAHA	YSM20	KLR-M4111-00	PANEL,DUMMY
YAMAHA	YSM20	KLV-M4131-00	BASE,C/R BOX
YAMAHA	YSM20	KLV-M4132-00	BRKT.,FAN
YAMAHA	YSM20	KLV-M4133-00	GUIDE,FLOW 2
YAMAHA	YSM20	KLV-M4134-00	COVER,FILTER 1
YAMAHA	YSM20	KLV-M4135-00	COVER,FILTER 2
YAMAHA	YSM20	KLV-M4136-00	FILTER
YAMAHA	YSM20	KLW-M53L6-00	FAN MOTOR ASSY.
YAMAHA	YSM20	KLW-M53M4-00	FAN MOTOR ASSY.
YAMAHA	YSM20	KLW-M5880-00	CONVERTER BOARD ASSY
YAMAHA	YSM20	KLF-M5119-01	TOUCH LCD ASSY
YAMAHA	YSM20	KKE-M4899-00	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-10	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-20	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-30	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-40	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-50	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-60	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-70	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-80	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-90	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-A0	LIGHT 1 ASSY
YAMAHA	YSM20	KKE-M4899-B0	LIGHT 1 ASSY
YAMAHA	YSM20	KLW-M669V-00	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-10	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-20	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-30	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-40	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-50	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-60	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-70	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-80	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-90	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-A0	HNS,SWITCH ACTIVE

YAMAHA Sparepart list

YAMAHA	YSM20	KLW-M669V-B0	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-C0	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-D0	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-E0	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KLW-M669V-F0	HNS,SWITCH ACTIVE
YAMAHA	YSM20	KGS-M4897-01	LIGHT,ERROR
YAMAHA	YSM20	KHG-M4896-01	LIGHT,ERROR
YAMAHA	YSM20	LC1-M13H2-00	SWITCH,EMG ASSY
YAMAHA	YSM20	KGK-M5381-00	EMG PLATE
YAMAHA	YSM20	KKE-M6554-A0	MAIN SWITCH ASSY
YAMAHA	YSM20	KKX-M8596-A0	PRESSURE GAUGE
YAMAHA	YSM20	KLF-M4267-10	USB MEMORY
YAMAHA	YSM20	KLF-M4580-00	I/O CONV.BOARD ASSY
YAMAHA	YSM20	KLF-M3992-00	SWITCH,SELECT
YAMAHA	YSM20	KLF-M138J-01	BALL CHAIN
YAMAHA	YSM20	KLF-M138K-00	RING
YAMAHA	YSM20	KLF-M516A-00	TOUCH PEN
YAMAHA	YSM20	91312-04045	BOLT HEX,SOCKET HEAD
YAMAHA	YSM20	K44-M643E-00	PARTS, 3-2
YAMAHA	YSM20	KG2-M643A-00	PARTS, 3-1
YAMAHA	YSM20	KH1-M539M-41	PROTECTOR ACCES.1P
YAMAHA	YSM20	KH1-M6515-01	CIRCUIT PROTECTOR, 2P
YAMAHA	YSM20	KH1-M6516-01	CIRCUIT PROTECTOR, 1P
YAMAHA	YSM20	KH4-M6514-01	CIRCUIT PROTECTOR,3P
YAMAHA	YSM20	KH4-M6515-31	CIRCUIT PROTECTOR,2P
YAMAHA	YSM20	KHN-M6175-10	FAN MOTOR
YAMAHA	YSM20	KHN-M643A-00	TERMINAL,POWER
YAMAHA	YSM20	KHN-M643A-10	TERMINAL, POWER
YAMAHA	YSM20	KHN-M643E-00	END PLATE
YAMAHA	YSM20	KHN-M643E-10	END PLATE
YAMAHA	YSM20	KHN-M6513-11	CIRCUIT PROTECTOR,1P
YAMAHA	YSM20	KHN-M6513-21	CIRCUIT PROTECTOR,1P
YAMAHA	YSM20	KHN-M6561-00	POWER SUPPLY 1
YAMAHA	YSM20	KKE-M6513-00	CIRCUIT PROTECTOR,1P
YAMAHA	YSM20	KKE-M6561-10	POWER SUPPLY 1
YAMAHA	YSM20	KKX-M6513-00	CIRCUIT PROTECTOR,1P
YAMAHA	YSM20	KLF-M4187-20	FAN GUARD 120MM
YAMAHA	YSM20	KLF-M537F-00	SAFETY RELAY
YAMAHA	YSM20	KLF-M537G-00	CONTACTOR,1
YAMAHA	YSM20	KLF-M537G-50	CONTACTOR,1
YAMAHA	YSM20	KLF-M6511-10	MAIN BREAKER,1
YAMAHA	YSM20	KLF-M6561-00	POWER SUPPLY 1
YAMAHA	YSM20	KLA-M459X-01	BATT UNIT ASSY
YAMAHA	YSM20	KLA-M5802-48	HEAD SERVO UNIT ASSY
YAMAHA	YV100II	KL3-M1348-10X	GAS, SPRING
YAMAHA	YV100II	KM1-M7104-A0X	Piston assy
YAMAHA	YV100II	KM1-M4592-13X	Vacuum sensor
YAMAHA	YV100II	KM5-M7174-11X	Ejector assy 13W with 44W valve
YAMAHA	YV100II	KM5-M7174-A2X	Ejector assy 13W with 2 valves

YAMAHA Sparepart list

YAMAHA	YV100II	KM1-M7163-21X	Blow off valve A010E1-54WY
YAMAHA	YV100II	KV8-M7162-100	Up/down valve
YAMAHA	YV100II	KV8-M7162-200	slow head valve
YAMAHA	YV100II	KV7-M2671-01X	Y axis ball screw
YAMAHA	YV100II	KM8-M710S-00X	Inner spline H1bef98
YAMAHA	YV100II	KM9-M7106-00	Spline assy H1bef98
YAMAHA	YV100II	KM1-M710S-A0X	Inner spline H2-8
YAMAHA	YV100II	KM9-M7107-00X	Spline assy H2-8
YAMAHA	YV100II	KM9-M710S-00X	Inner spline H1 aft98
YAMAHA	YV100II	KM9-M7106-00X	Spline assy H1 aft98
YAMAHA	YV100II	KH5-M655A-A0X	SENSOR, 1-1
YAMAHA	YV100II	KM1-M7155-00X	Bearing fix shaft
YAMAHA	YV100II	KG2-M2604-00X	Support unit
YAMAHA	YV100II	KM8-M2643-01X	Holder bearing
YAMAHA	YV100II	KM8-M2645-10X	Thrust bearing
YAMAHA	YV100II	KM8-M2646-01X	Spring coned disk
YAMAHA	YV100II	KG2-M9173-00X	Lock nut
YAMAHA	YV100II	KG7-M441H-B1X	VISION BOARD ASSY
YAMAHA	YV100II	KG2-M66F3-001	HARNESS 12-3
YAMAHA	YV100II	KM7-M7214-20X	LENS 25
YAMAHA	YV100II	KM1-M7312-10X	LENS HOLDER
YAMAHA	YV100II	KV8-M7310-00X	L CAMERA ASSY
YAMAHA	YV100II	KH4-M655F-20X	SENSOR,1-3 MAIN-S
YAMAHA	YV100II	90K55-87134X	X motor
YAMAHA	YV100II	K98-M9283-00X	CYLINDER Sub-stopper
YAMAHA	YV100II	KG7-M9166-00X	CYLINDER PUSH-IN
YAMAHA	YV100II	KG7-M9165-00X	CYLINDER,MAIN Stopper
YAMAHA	YV100II	KG7-M9166-00X	CYLINDER PUSH-IN
YAMAHA	YV100II	KM1-M7154-00X	Spring return shaft
YAMAHA	YV100II	KM1-M665H-00X	WNS Y X FLEX
YAMAHA	YV100II	KU0-M655F-20X	SENSOR 1-3 CONV in/out
YAMAHA	YV100II	KV7-M2267-A1X	Flex cable duct X
YAMAHA	YV100II	K40-M7133-00X	Shock absorber
YAMAHA	YV100II	KH5-M655A-A1X	Sensor 1-1 nozzle detect sensor
YAMAHA	YV100II	KV1-M4570-03	I/O HEAD UNIT ASSY
YAMAHA	YV100II	KG2-M3407-A0X	AIR JOINT
YAMAHA	YV100II	KM5-M441H-03	VISION BOARD ASSY
YAMAHA	YV100II	KG9-M7210-11	CCD CAMERA (moving)
YAMAHA	YV100II	KV1-M4570-03	Head IO board+Core
YAMAHA	YV100II	KV7-M66F6-00X	C. CABLE ASSY. [J502]
YAMAHA	YV100II	KM8-M669Y-00	HARNESS, 9-17 (Io, LIGHT)
YAMAHA	YV100II	KJ0-M5810-E5X	Driver board assy
YAMAHA	YV100II	KM5-M5840-04X	SERVO BOARD ASSY
YAMAHA	YV100II	KM1-M7186-00X	O-RING
YAMAHA	YV100II	KH2-M1725-01	LCS brake
YAMAHA	YV100II	KM5-M4560-130	Head IO board
YAMAHA	YV100II	90K50-4W035R	R motor
YAMAHA	YV100II	KJ2-M7137-00X	belt R motor
YAMAHA	YV100II	KM5-M4255-00X	FLASH DISK

YAMAHA Sparepart list

YAMAHA	YV100II	K46-M9174-10X	GUIDE main stopper
YAMAHA	YV100II	KG7-M8501-00X	AIR FILTER
YAMAHA	YV100II	KG7-M8502-00X	MIST FILTER
YAMAHA	YV100II	KM5-M4200-03X	SYSTEM UNIT ASSY
YAMAHA	YV100II	KJW-M1200-023	Yamaha FT type feeder
YAMAHA	YV100II	KM5-M4510-10X	MOTHER BOARD ASS
YAMAHA	YV100II	KM5-M5840-004	SERVO BOARD ASSY
YAMAHA	YV100II	KJ0-M5810-E22	Driver board assy
YAMAHA	YV100II	KJ0-M5810-000	Driver board assy
YAMAHA	YV100II	KM1-M4570-001	Board head assy
YAMAHA	YV100XE	KV8-M712S-A0X	pline H1357 assy
YAMAHA	YV100XE	KV8-M713S-A0X	Spline H2468 SF assy
YAMAHA	YV100XE	KV8-M711S-A0X	Spline H2468 FNC assy
YAMAHA	YV100XE	KGB-M71S0-50X	Spline SF without bearing
YAMAHA	YV100XE	KG7-M7137-A03	leaf spring
YAMAHA	YV100XE	KV8-M7162-100	Up/down valve
YAMAHA	YV100XE	KM1-M7163-21X	blow off valve
YAMAHA	YV100XE	KV8-M7162-200	slow head valve
YAMAHA	YV100XE	KM5-M7174-11X	ejector assy
YAMAHA	YV100XE	KM1-M4592-13X	Vacuum sensor
YAMAHA	YV100XE	KV8-M7104-A0X	Piston assy
YAMAHA	YV100XE	KM1-M7141-00X	Packing
YAMAHA	YV100XE	KM1-M7107-00X	Packing
YAMAHA	YV100XE	KM1-M7186-00X	O-ring
YAMAHA	YV100XE	K65-M257M-00X	O-ring
YAMAHA	YV100XE	90990-17J00B	O-ring metal cap
YAMAHA	YV100XE	90990-17J010	O-ring plastic cap
YAMAHA	YV100XE	K46-M8527-C0X	Ejector filter
YAMAHA	YV100XE	KV8-M7160-00X	Sensor head height
YAMAHA	YV100XE	KM1-M7138-00X	head belt
YAMAHA	YV100XE	KV8-M7137-00X	belt R motor
YAMAHA	YV100XE	KV8-M71U0-01X	FNC assy (incl. 3 nozzles)
YAMAHA	YV100XE	KJ0-M5810-K4X	Driver board
YAMAHA	YV100XE	KM5-M5840-04X	SERVO BOARD ASSY
YAMAHA	YV100XE	99001-03600	Circlip
YAMAHA	YV100XE	KL3-M1348-10X	CYLINDER,ORION DOOR LIFT
YAMAHA	YV100XE	\$SC4-M5A	SPEED CONTROLLER
YAMAHA	YV100XE	\$SL4-M5	JOINT
YAMAHA	YV100XE	KV8-M7103-00X	Piston plug assy
YAMAHA	YV100XE	KV8-M7103-10X	Plug assy
YAMAHA	YV100XE		Sensor head height
YAMAHA	YV100XE	KV8-M653F-A0X (84)	Only one
YAMAHA	YV100XE	KV8-M653G-A0X (85)	Only one
YAMAHA	YV100XE	KV8-M71YA-00X	VALVE CLUTCH
YAMAHA	YV100XE	KM1-M9604-00X	JOINT, ORION NOZ. STAT.
YAMAHA	YV100XE	\$SLH8-01	Joint
YAMAHA	YV100XE	KM0-M655F-10X	SENSOR, 1-2 SUB STOP
YAMAHA	YV100XE		CYLINDER UP/DOWN
YAMAHA	YV100XE	KV8-M71Y3-00X	BEARING R1

YAMAHA Sparepart list

YAMAHA	YV100XE	KH5-M655A-A0X	SENSOR, 1-1
YAMAHA	YV100XE	KM1-M7155-00X	Bearing fix shaft
YAMAHA	YV100XE	90K55-4W074R	R motor
YAMAHA	YV100XE	KV7-M9229-00X	Cylinder Push In
YAMAHA	YV100XE	KV8-M6474-003	LED DRIVER BOARD ASSY
YAMAHA	YV100XE	KV8-V4570-102	Head IO board+Core
YAMAHA	YV100XE	KV7-M9132-10X	W ball screw
YAMAHA	YV100XE	KV7-M921A-00X	Belt push up
YAMAHA	YV100XE	KV7-M9283-00X	Cylinder sub stopper
YAMAHA	YV100XE	\$TSH4-M5	Joint
YAMAHA	YV100XE	90K50-4W072W	W axis motor
YAMAHA	YV100XE	90K52-87174X	X axis motor
YAMAHA	YV100XE	90K52-8A174Y	Y MOTOR
YAMAHA	YV100XE		LCS vacuum pad
YAMAHA	YV100XE	KM5-M4200-02X	System board
YAMAHA	YV100XE	KM5-M4510-20X	MOTHER BOARD ASSY
YAMAHA	YV100XE	KM5-M4255-00X	Flash disk
YAMAHA	YV100XE	KV8-M4572-003	I/O BOARD HEAD ASSY
YAMAHA	YV100XE	KM5-M4580-011	I/O CONVEYOR UNIT
YAMAHA	YV100XE	KV7-M9146-00X	conv second belt
YAMAHA	YV100XE	KG7-M9115-00X	W belt
YAMAHA	YV100XE	KV7-M921A-00X	Push up belt L1260mm
YAMAHA	YV100XE	KV8-M71U5-00X	FNC screw
YAMAHA	YV100XE	KV8-M71U7-00X	SPRING 71F 72F
YAMAHA	YV100XE	KV8-M71U7-10X	SPRING 73F
YAMAHA	YV100XE	KM0-M1332-00X	BRACKET MAGNET
YAMAHA	YV100XE	K93-M1388-00X	Magnet catch
YAMAHA	YV100XE	K46-M1374-10X	HINGE 2
YAMAHA	YV100XE	KV8-M7154-00X	Spring return SF shaft
YAMAHA	YV100XE	KG7-M7169-00X	
YAMAHA	YV100XE	90990-28J002	SCREW
YAMAHA	YV100XE	KGA-M4185-10X	WASHER PLAIN
YAMAHA	YV100XE	KGA-M4185-10X	FAN MOTOR ASSY
YAMAHA	YV100XE		FAN GUARD
YAMAHA	YV100XE	KV8-M7111-00	EMERG SAFETY SWITCH
YAMAHA	YV100XE	KV8-M71Y1-00	PULLY,POST
YAMAHA	YV100XE	KV8-M71Y2-00	COLLAR 1,PULLEY
YAMAHA	YV100XE	99009-10800	COLLAR 2,PULLEY
YAMAHA	YV100XE	KV8-M7116-00	CIRCLIP
YAMAHA	YV100XE	KV8-M7113-00	PULLY 2
YAMAHA	YV100XE	92A08-04305	RING,DOG
YAMAHA	YV100XE	KV8-M7139-00	SET SCREW
YAMAHA	YV100XG	KG7-M8501-40X	AIR FILTER ELEMENT
YAMAHA	YV100XG	KV8-M8502-40X	Mist filter element
YAMAHA	YV100XG	KGB-M712S-A0X	Spline H1357 assy
YAMAHA	YV100XG	KGB-M71S0-50X	Spline H1357 without bearing
YAMAHA	YV100XG	KGB-M713S-A0X	Spline H2468 SF assy
YAMAHA	YV100XG	KGB-M711S-A0X	Spline H2468 FNC assy
YAMAHA	YV100XG		Spline H2468 FNC without bearing

YAMAHA Sparepart list

YAMAHA	YV100XG	K46-M8527-C0X	Ejector filter
YAMAHA	YV100XG	KV8-M7162-10X	Up/down valve
YAMAHA	YV100XG	KM1-M7163-20X	blow off valve
YAMAHA	YV100XG	KV8-M7162-20X	slow head valve
YAMAHA	YV100XG	KGB-M7163-A0X	Ejector assy with 44W valve
YAMAHA	YV100XG	KM1-M7140-00X	Packing
YAMAHA	YV100XG	KGB-M653A-00X	Sensor head height
YAMAHA	YV100XG	KGB-M7181-00X	head belt
YAMAHA	YV100XG	KGB-M7137-00X	belt R motor
YAMAHA	YV100XG	KV1-M441H-18X	Vision board
YAMAHA	YV100XG	KM5-M5840-03X	Servo board
YAMAHA	YV100XG	KW3-M4209-00X	System board
YAMAHA	YV100XG	KJ0-M5810-K4X	Driver board
YAMAHA	YV100XG	KM5-M4580-011	Conveyor IO board+Core
YAMAHA	YV100XG	KGA-M4550-10X	Connection board
YAMAHA	YV100XG	KGA-M4510-00X	Mother board
YAMAHA	YV100XG		Head IO core board
YAMAHA	YV100XG	KV8-M4572-003	Head IO board+Core
YAMAHA	YV100XG	90K56-8A174Y	Y motor
YAMAHA	YV100XG	90K56-8717EX	X motor
YAMAHA	YV100XG	90K55-4W073R	R motor
YAMAHA	YV100XG	KV8-M71Y5-00X	Packing
YAMAHA	YV100XG	KG2-M7181-00X	Packing
YAMAHA	YV100XG	\$KM-05	Muffler
YAMAHA	YV100XG	KV7-M9129-00X	Belt (conveyor)
YAMAHA	YV100XG	90990-17J013	o-ring for 74 Nozzle
YAMAHA	YV100XG	KV7-M9165-01X	Cylinder, main stopper
YAMAHA	YV100XG	KV8-M71YB-00X	Packing
YAMAHA	YV100XG	KV7-M7600-00X	Fiducial light assy
YAMAHA	YV100XG	KV7-M7211-00	Lens 095
YAMAHA	YV100XG	KV8-M71Y9-00X	Body cylinder
YAMAHA	YV100XG	KM1-M4592-13X	Vacuum sensor
YAMAHA	YV100XG	KV8-M7103-50X	PLUG HEAD 2-4-6-8
YAMAHA	YV100XG	KG7-M8596-00X	Pressure gauge
YAMAHA	YV100XG	KV8-M71WG-00X	
YAMAHA	YV100XG	KGB-M71Y9-50X	
YAMAHA	YV100XG	KM1-M7155-00X	Bolt spacer
YAMAHA	YV100XG		Body cylinder SF
YAMAHA	YV100XG	90K55-523D5U	Bearing fix shaft
YAMAHA	YV100XG	KV7-M4886-00X	SENSOR LASER, ASSY
YAMAHA	YV100XG	90K55-4W476W	Push Up motor
YAMAHA	YV100XG	KV7-M2267-A1X	Conveyor belt motor
YAMAHA	YV100XG	KGN-M4255-00X	Conveyor W motor
YAMAHA	YV100XG	KG2-M9108-11X	Cable duct
YAMAHA	YV100XG	KH5-M655A-A1X	Flash disk 256 Mb
YAMAHA	YV100XG		COLLAR, CONVEYOR
YAMAHA	YV100XG	90K55-4W074Z	SWITCH, OPTICAL
YAMAHA	YV100XG	90K55-4W073R	24V Power Supply
YAMAHA	YV100XG	KV7-M9140-A0X	AC servo motor Z axis

YAMAHA Sparepart list

YAMAHA	YV100XG	91317-05020	AC servo motor R axis
YAMAHA	YV100XG	KV7-M9166-00X	PULLEY, CONVEYOR ASSY.
YAMAHA	YV100XG	KV7-M9164-00	BOLT HEX.SOCKET HEAD
YAMAHA	YV100XG	KV7-M9161-00	Guide, main stopper
YAMAHA	YV100XG	KV7-M9163-00X	BRKT., CYLINDER
YAMAHA	YV100XG	KV7-M9162-01X	PLATE, STOPPER
YAMAHA	YV100XG		STOPPER
YAMAHA	YV100XG	KV8-M7101-00	BRKT., STOPPER
YAMAHA	YV100XG	KV7-M9169-00	Bearing Y- axis Systems
YAMAHA	YV100XG	KGA-M73C0-42X	Housing head
YAMAHA	YV100XG	KV8-M653F-A0X	BRKT., STOPPER
YAMAHA	YV100XG		Rear Multi Camera 50mm assy
YAMAHA	YV100XG	KGB-M71E4-01	SENSOR 3 ASSY
YAMAHA	YV100XG	KGK-M5138-00X	Complete head marker right assembly
YAMAHA	YV100XG	KM5-M7174-G0X	SEAL,MULTI MACS
YAMAHA	YV100XG	KM5-M6554-10X	SWITCH EMG ASSY
YAMAHA	YV100XG	KM8-M34A0-01	FILTER Plastic CAP
YAMAHA	YV100XG	KG7-M8504-00	MAIN SWITCH
YAMAHA	YV100XG	KGB-M653F-10	Opal feeder bar (50 pcs)
YAMAHA	YV100XG	KV8-M7166-00	REGULATOR
YAMAHA	YV100XG	KGB-M7183-00X	SENSOR 3 ASSY
YAMAHA	YV100XG	KV7-M9188-00X	PLATE, VALVE
YAMAHA	YV100XG	KGA-M66F0-01	PLATE,EJECTOR
YAMAHA	YV100XG	KV1-M73A0-34	Locate pin belt
YAMAHA	YV100XG	KGA-M73C0-31	C.CABLE ASSY
YAMAHA	YV100XG	KV7-M221A-A0X	MULTI CAM.SUB ASSY
YAMAHA	YV100XG	KGA-M3455-11X	C+L FOV35-H266-F-U/D
YAMAHA	YV100XG	KV7-M2267-00X	COVER DUCT ASSY
YAMAHA	YV100XG	KV8-M7730-A0X	Sensor assy
YAMAHA	YV100XG	KGA-M4185-10X	Cable duct
YAMAHA	YV100XG	KH2-M7819-30X	FAN MOTOR ASSY
YAMAHA	YV100XG	KGB-M653A-02	FAN MOTOR ASSY
YAMAHA	YV100XG	91317-03060	PAD VACUUM for YTF 100A tray
YAMAHA	YV100XG	91317-03065	Sensor head assy
YAMAHA	YV100XG	KV7-M653A-00X	BOLT,HEX.SOCKET HEAD M3x60
YAMAHA	YV100XG	KV7-M653E-00X	BOLT,HEX.SOCKET HEAD M3x65
YAMAHA	YV100XG	KG7-M8 501-00X	SENSOR, 1 ASSY
YAMAHA	YV100XG	KV8 -M8 502-00X	SENSOR, 2 ASSY
YAMAHA	UY100	KG7-M8501-40X	Spline H1357 assy
YAMAHA	UY100	KV8-M8502-40X	Spline H2468 SF assy
YAMAHA	UY100	KGS-M655B-00X	Spline H2468 FNC assy
YAMAHA	UY100	KGS-M7171-A0X	Spline SF without bearing
YAMAHA	UY100	KGR-M9934-F0X	leaf spring
YAMAHA	UY100	KGT-M4580-00X	Up/down valve
YAMAHA	UY100	KGS-M4570-01X	blow off valve
YAMAHA	UY100	KGS-M655A-10X	slow head valve
YAMAHA	UY100	KGJ-M441H-03x	ejector assy
YAMAHA	UY100	90K2B-0H2203	Vacuum sensor
YAMAHA	UY100	90K2B-0HC204	Piston assy

YAMAHA Sparepart list

YAMAHA	UY100	90K2B-0H2205	Packing
YAMAHA	UY100	90K2B-0HC206	Packing
YAMAHA	UY100	90K2B-0H2207	O-ring
YAMAHA	UY100	90K2B-0HC208	O-ring
YAMAHA	UY100	90K2B-0H2209	O-ring metal cap
YAMAHA	UY100	90K2B-0HC210	O-ring plastic cap
YAMAHA	UY100	90K2F-0CF611	Ejector filter
YAMAHA	UY100	90K2F-0CE412	Sensor head height
YAMAHA	UY100	KGS-M7140-D3	head belt
YAMAHA	UY100	KGS-M7140-D3	belt R motor
YAMAHA	UY100	KM1-M4592-13X	FNC assy (incl. 3 nozzles)
YAMAHA	UY100	KGS-M653A-A0X	Driver board
YAMAHA	UY100	KGS-M1348-00X	SERVO BOARD ASSY
YAMAHA	UY100	KGS-M9129-00X	Circlip
YAMAHA	UY100	\$BF4BU	CYLINDER,ORION DOOR LIFT
YAMAHA	UY100	KGK-M9267-01X	SPEED CONTROLLER
YAMAHA	UY100	KM1-M7163-20X	JOINT
YAMAHA	UY100	KGS-M911D-B2X	Piston plug assy
YAMAHA	UY100	KV7-M921D-10X	Plug assy
YAMAHA	UY100	90K65-021606	Sensor head height
YAMAHA	UY100	KGS-M9262-01X	Only one
YAMAHA	UY100	91317-02005	Only one
YAMAHA	UY100	KGS-M9266-01X	VALVE CLUTCH
YAMAHA	UY100	KGA-M37P0-00X	JOINT, ORION NOZ. STAT.
YAMAHA	UY100	KGS-M9129-00	Joint
YAMAHA	UY100	KGS-M9129-50	SENSOR, 1-2 SUB STOP
YAMAHA	UY100	KHW-M7118-A1	CYLINDER UP/DOWN
YAMAHA	UY100	KHU-M3756-01	BEARING R1